

# **Mamiya**

## **PARTS CATALOG**

**FOR**

**Mamiya RB 67  
PRO S**

**Camera Body**


**Roll Film Holder**


  
**Mamiya**  
CAMERA CO., LTD.  
TOKYO, JAPAN


**April 1975**


## EXPLODED VIEWS



# mamiya RB67 PROS


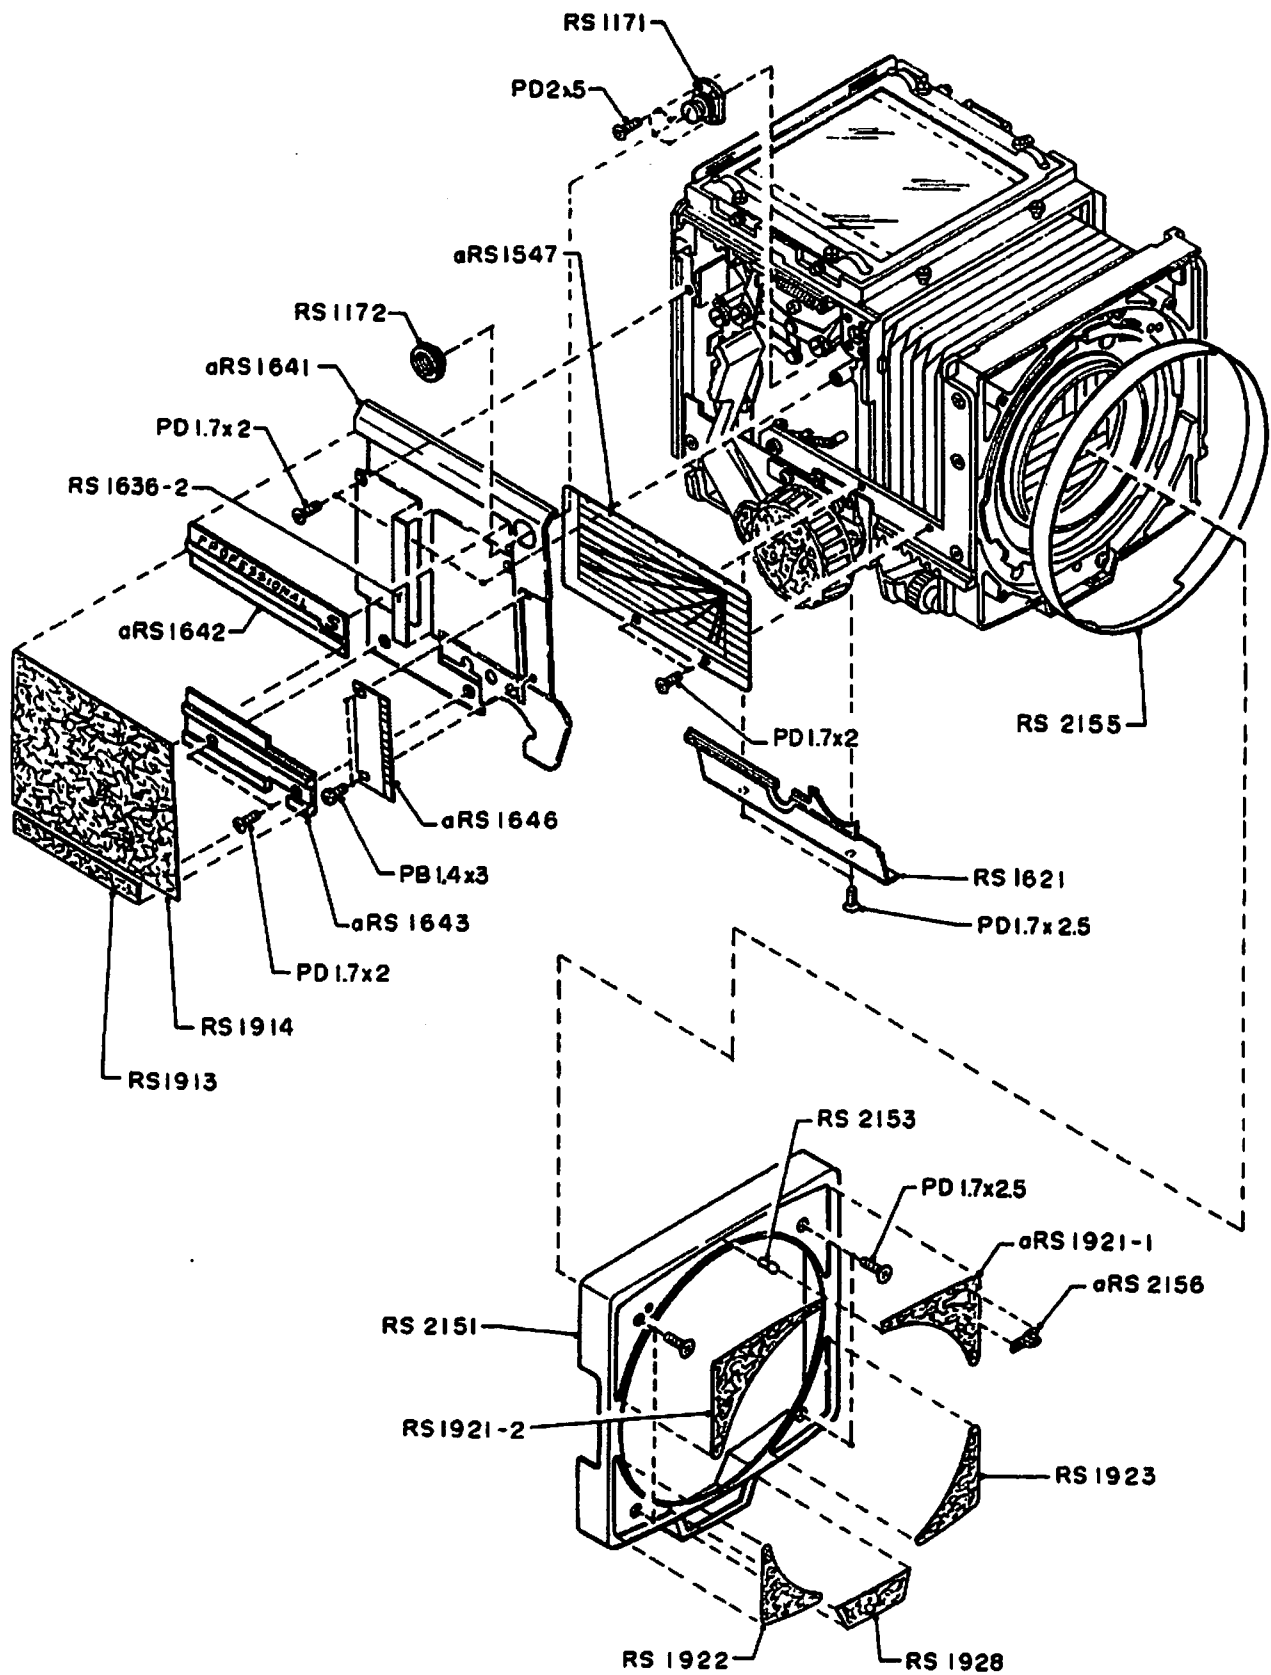


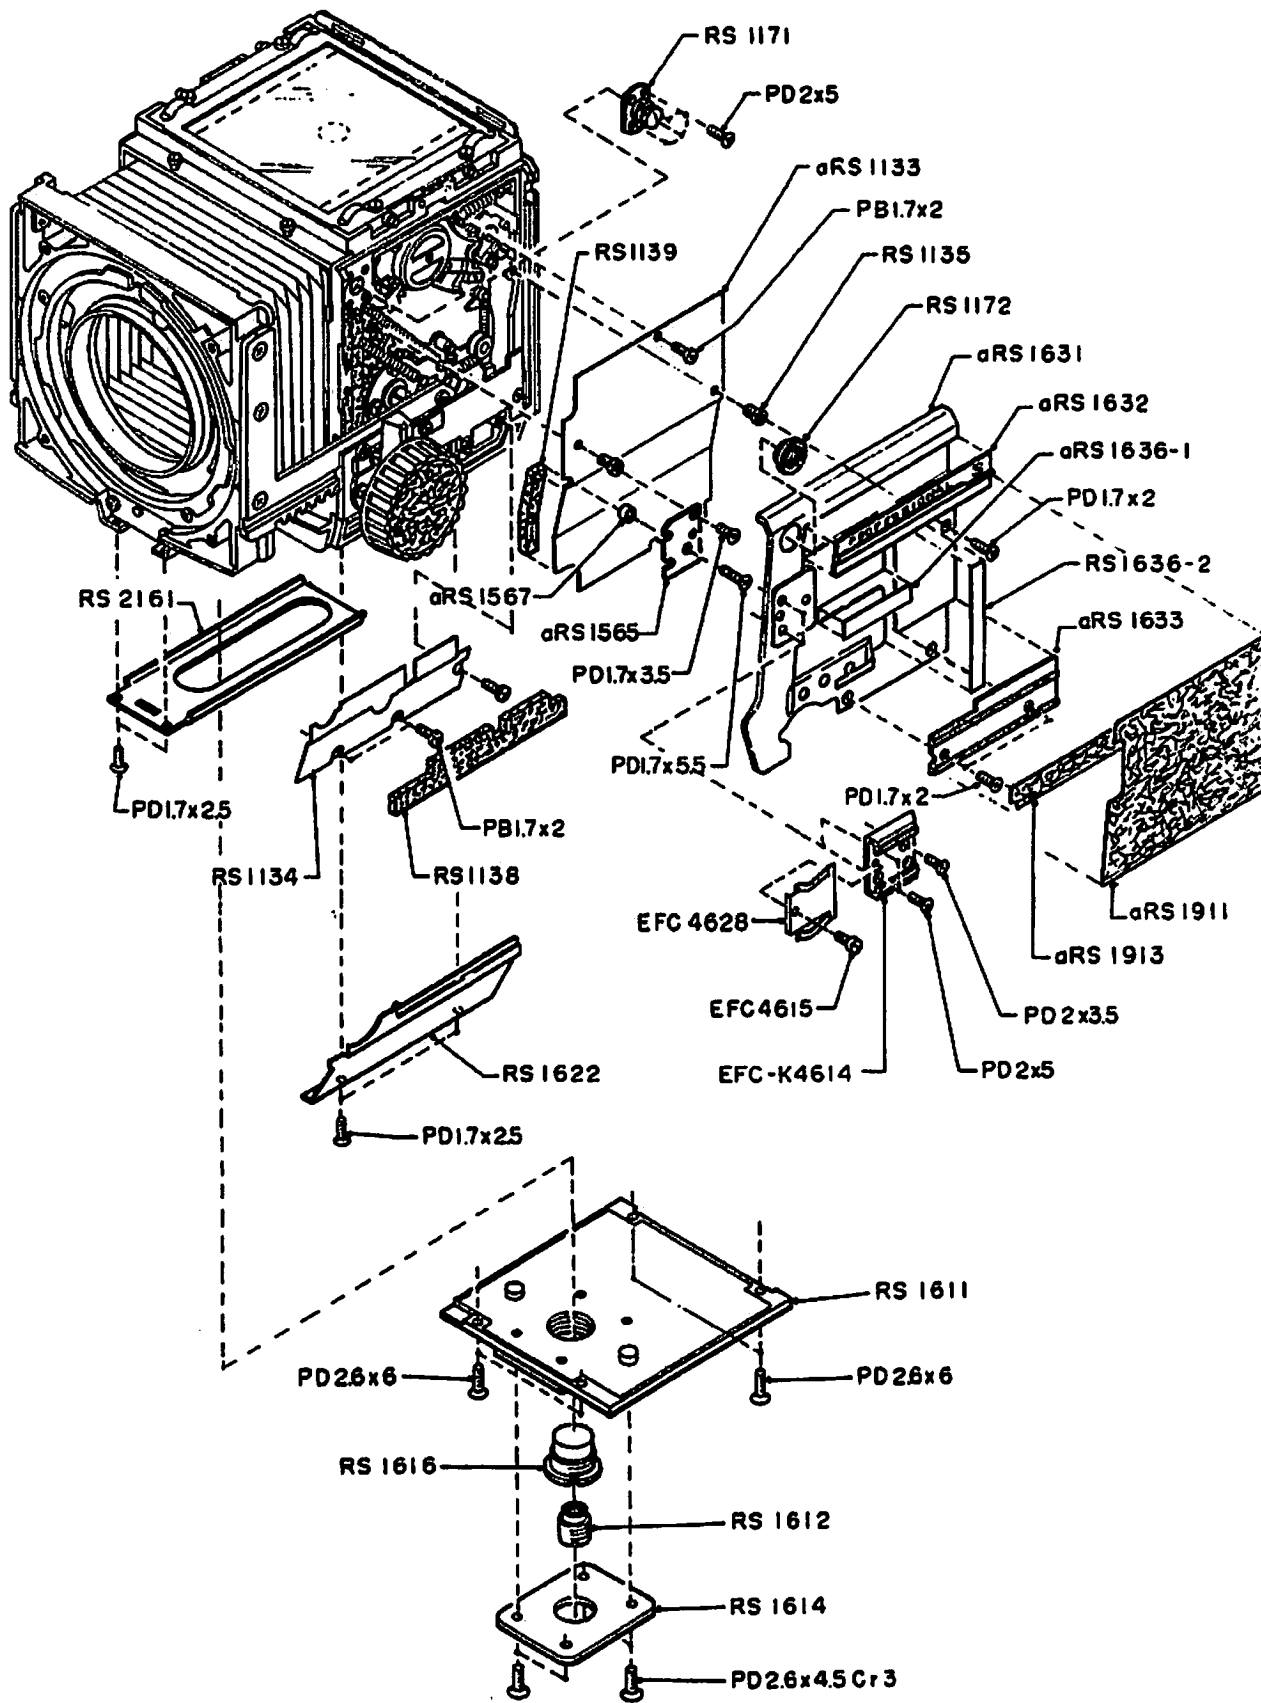

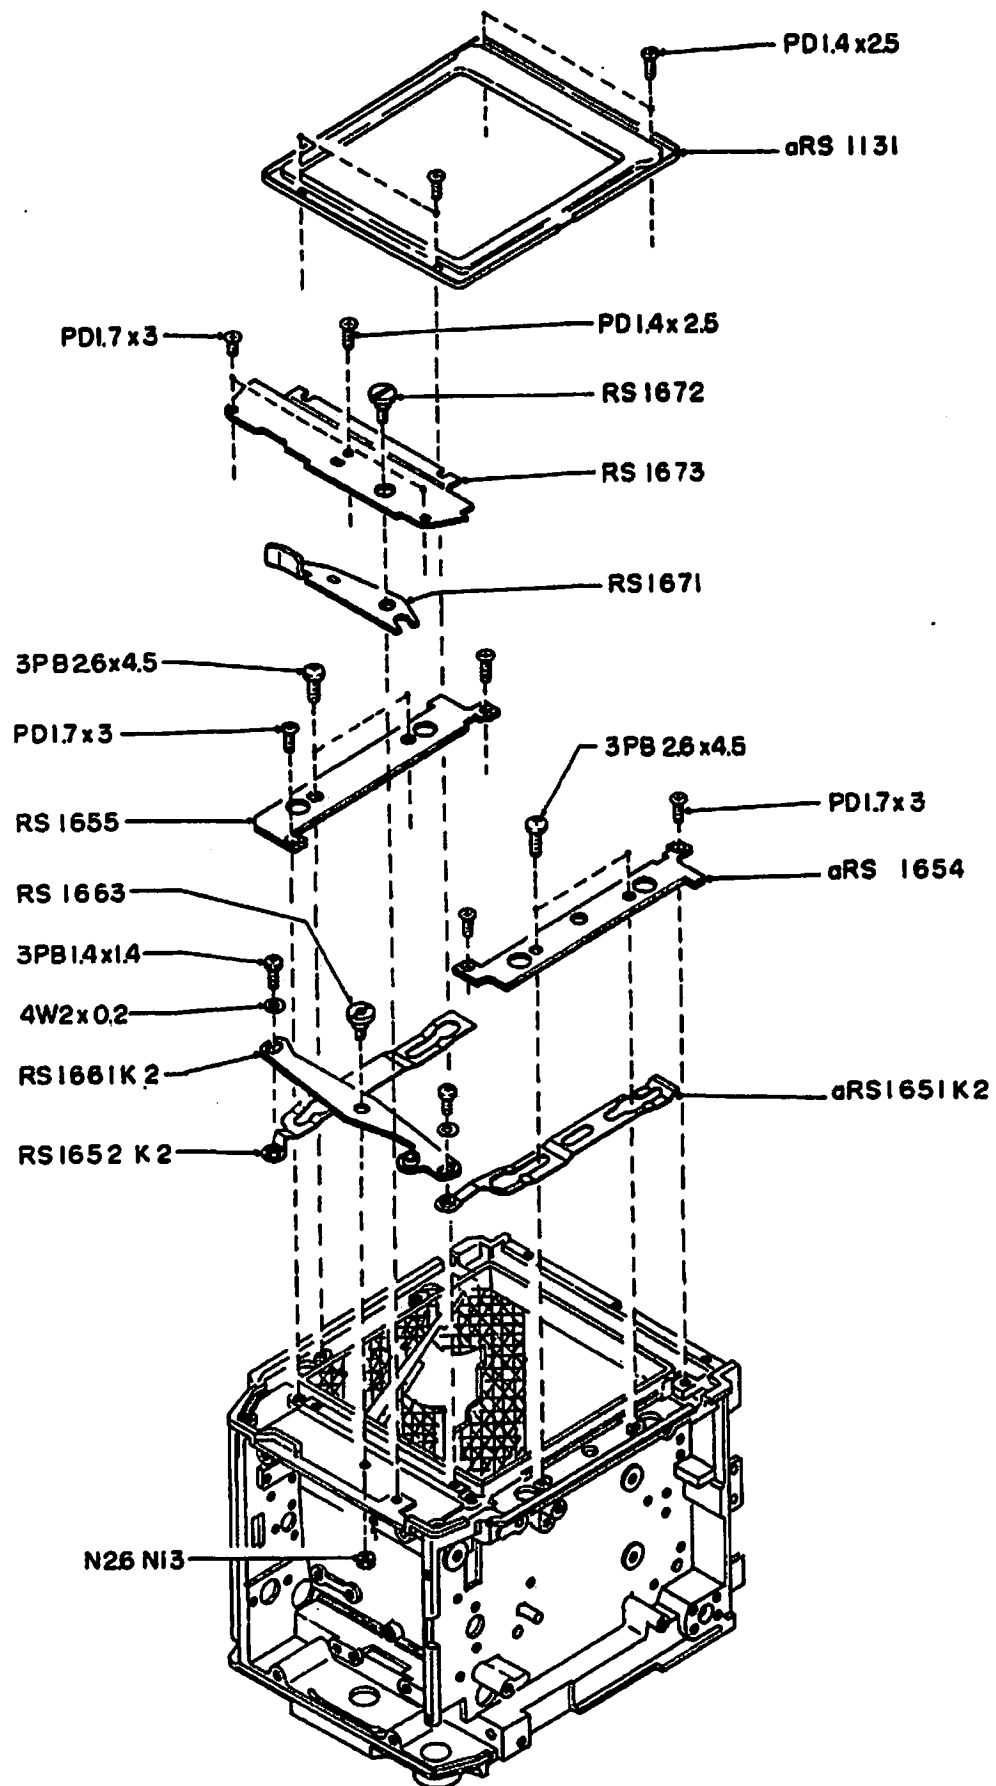


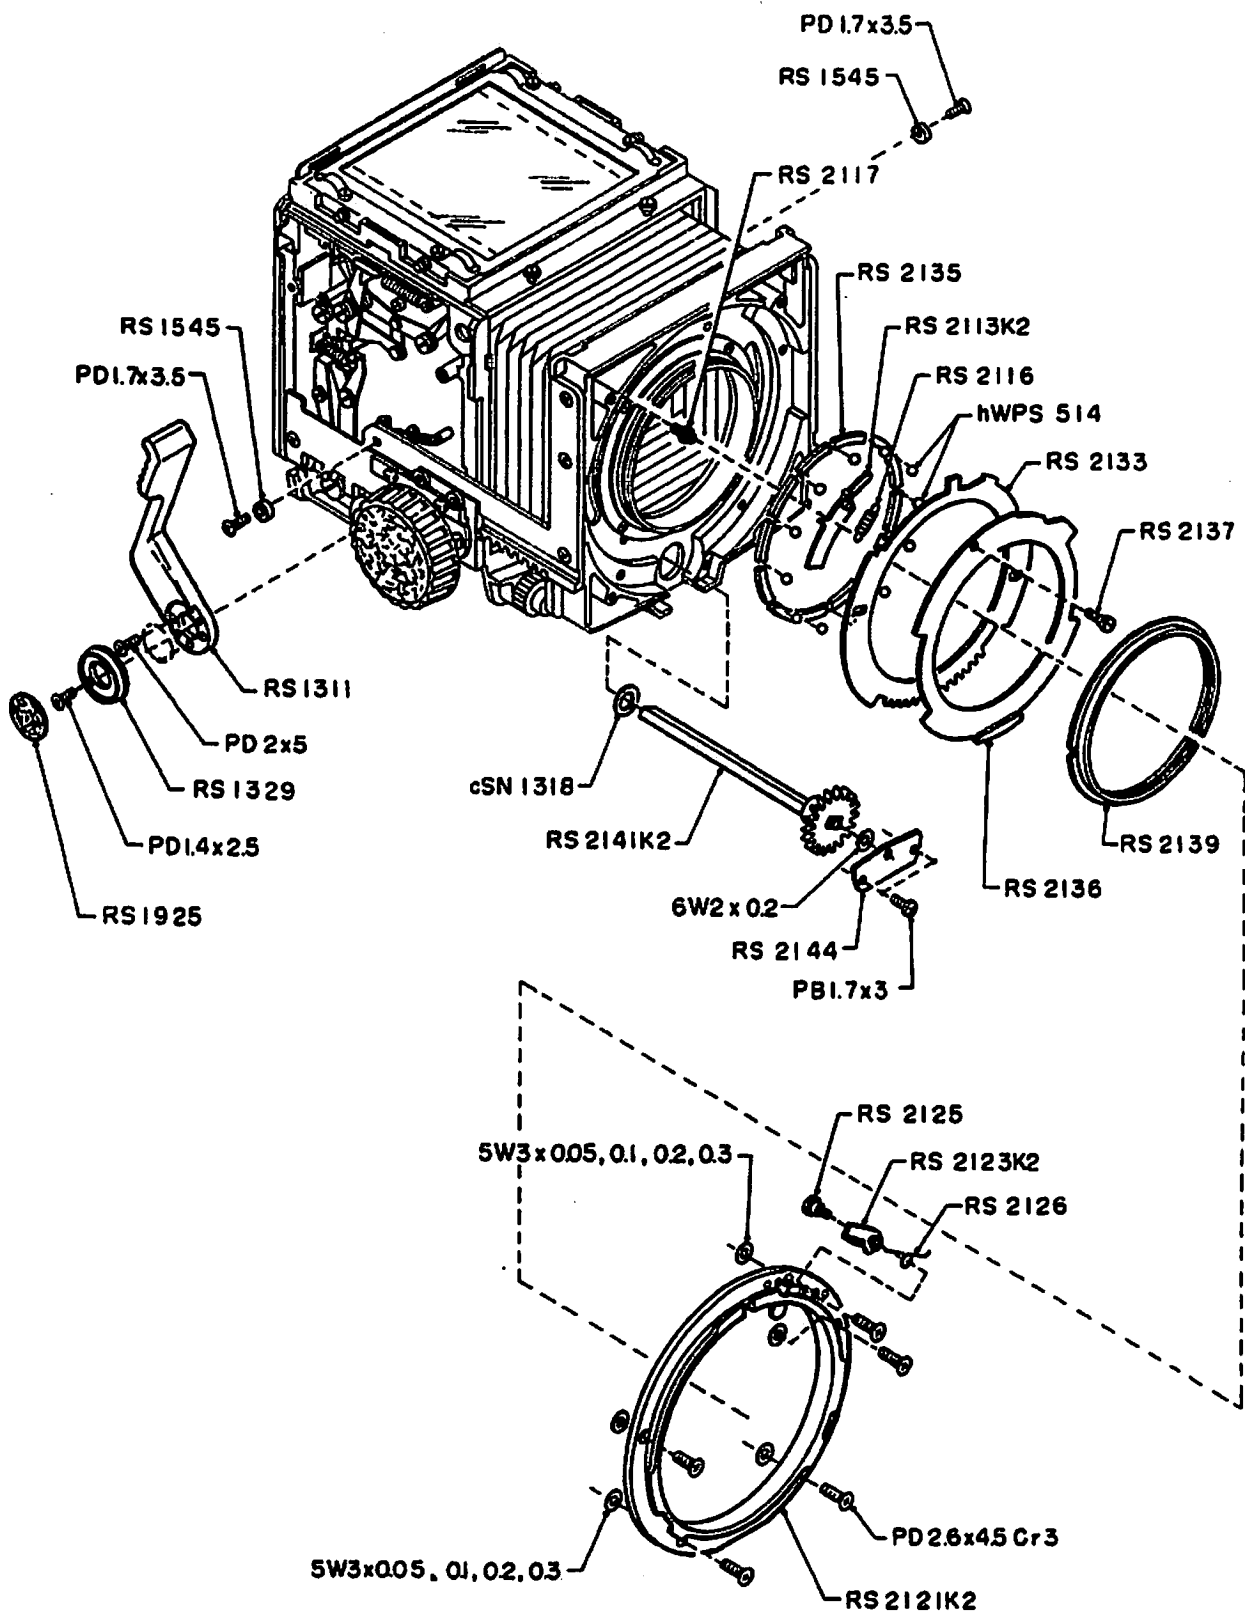

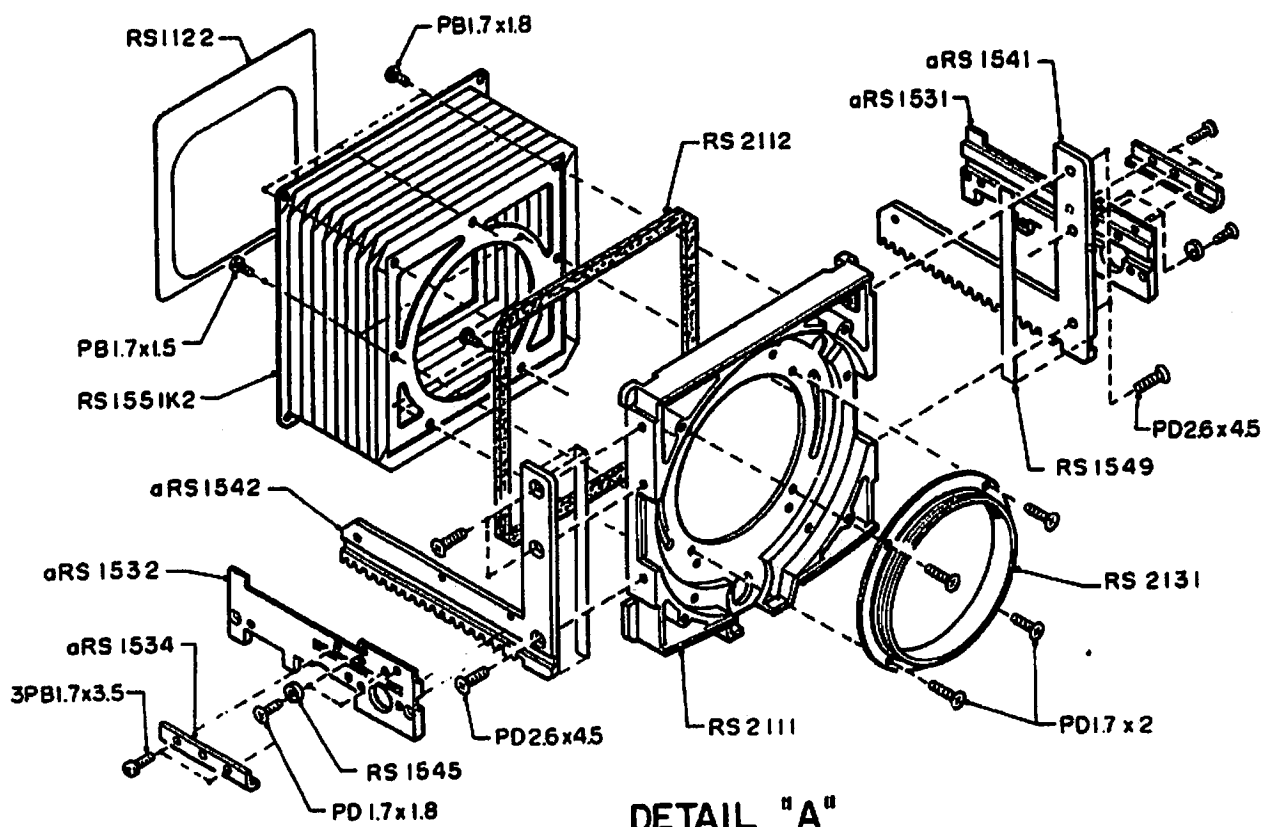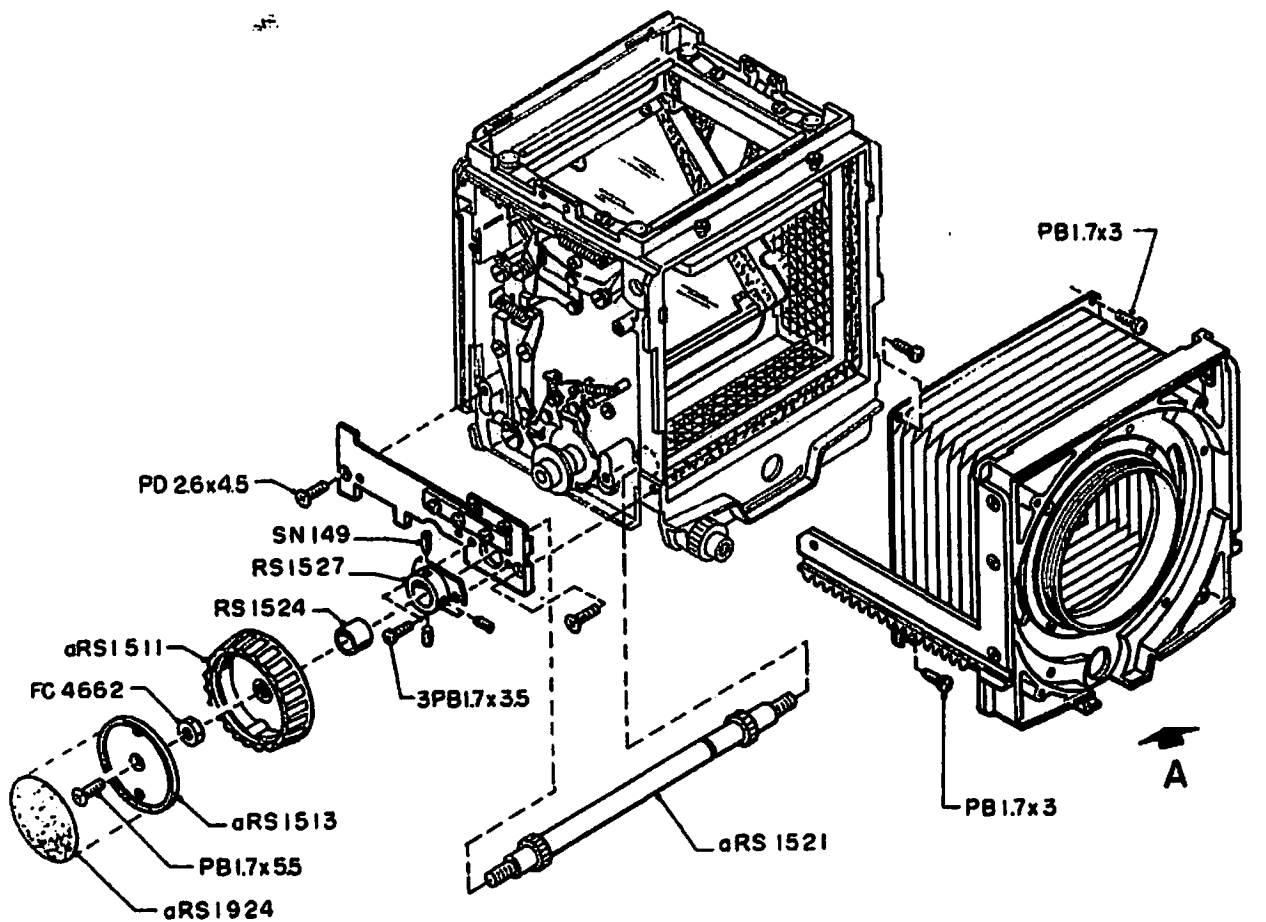


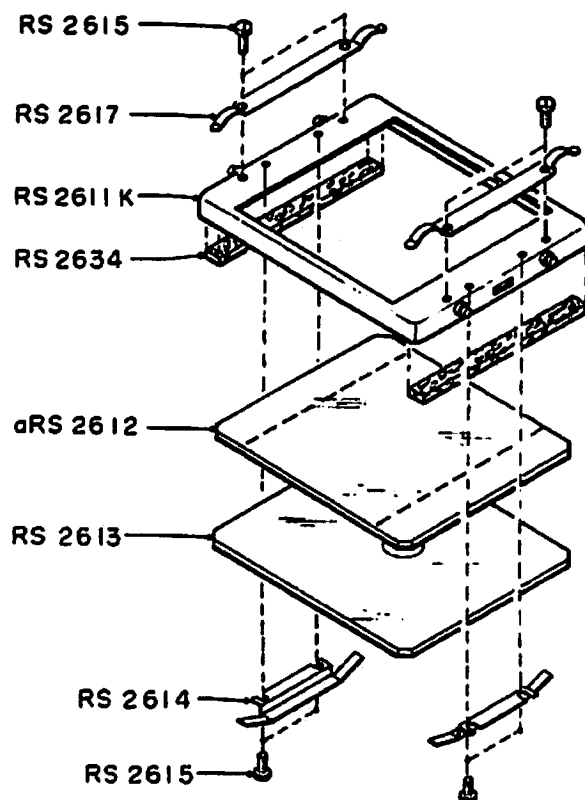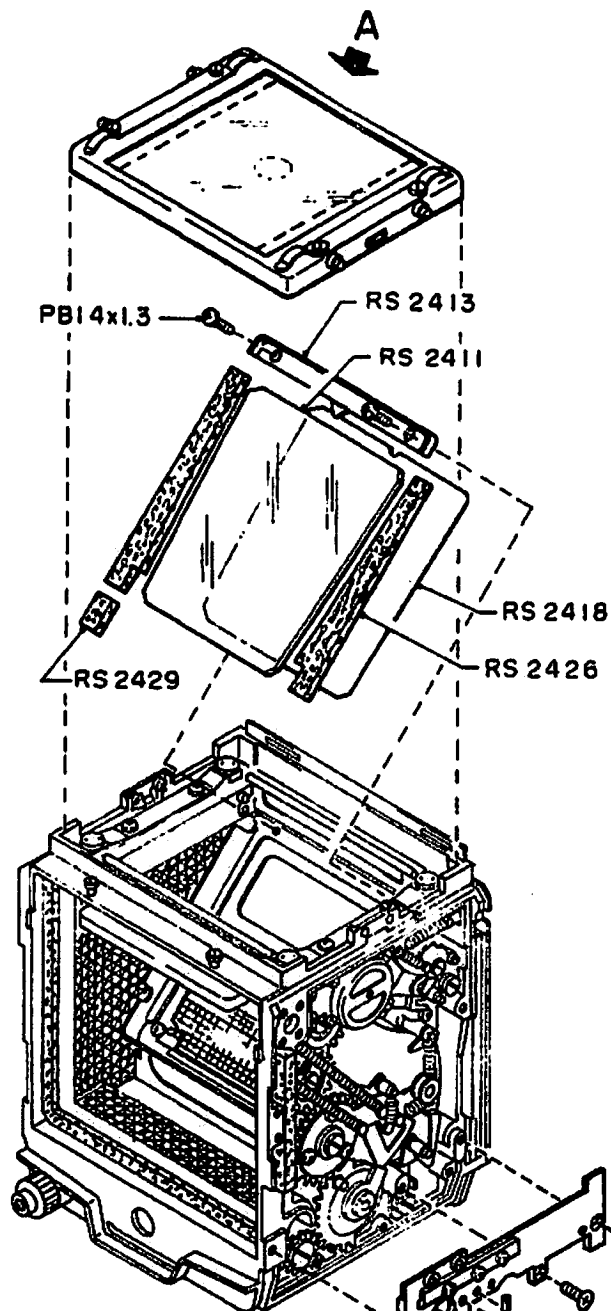



DETAIL "A"

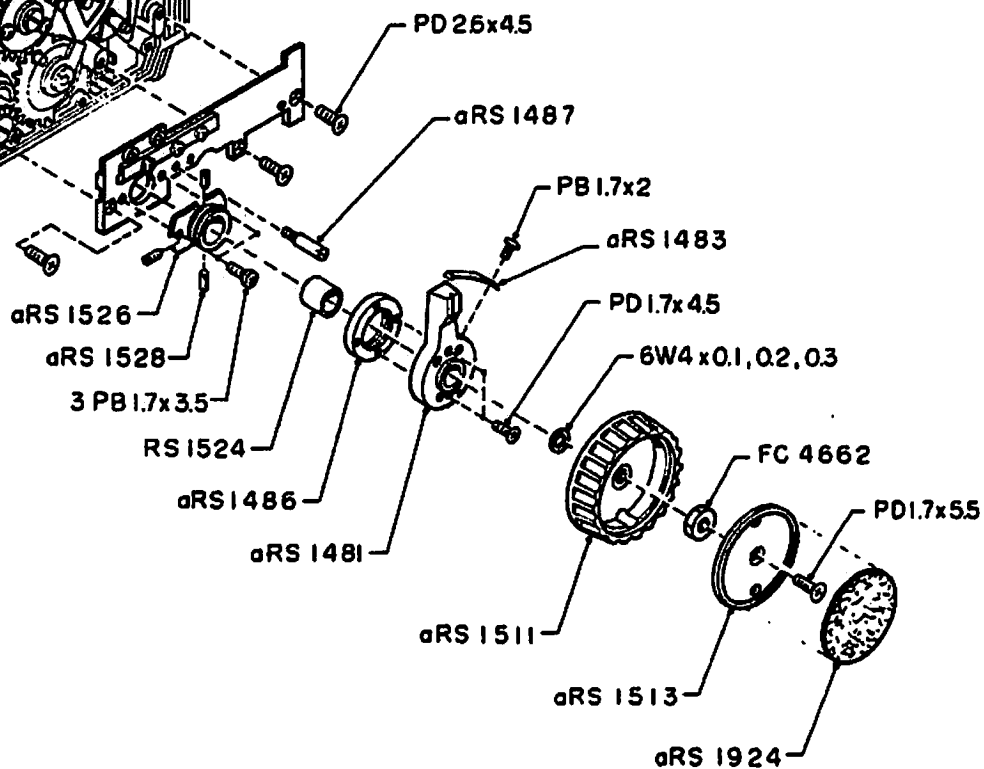




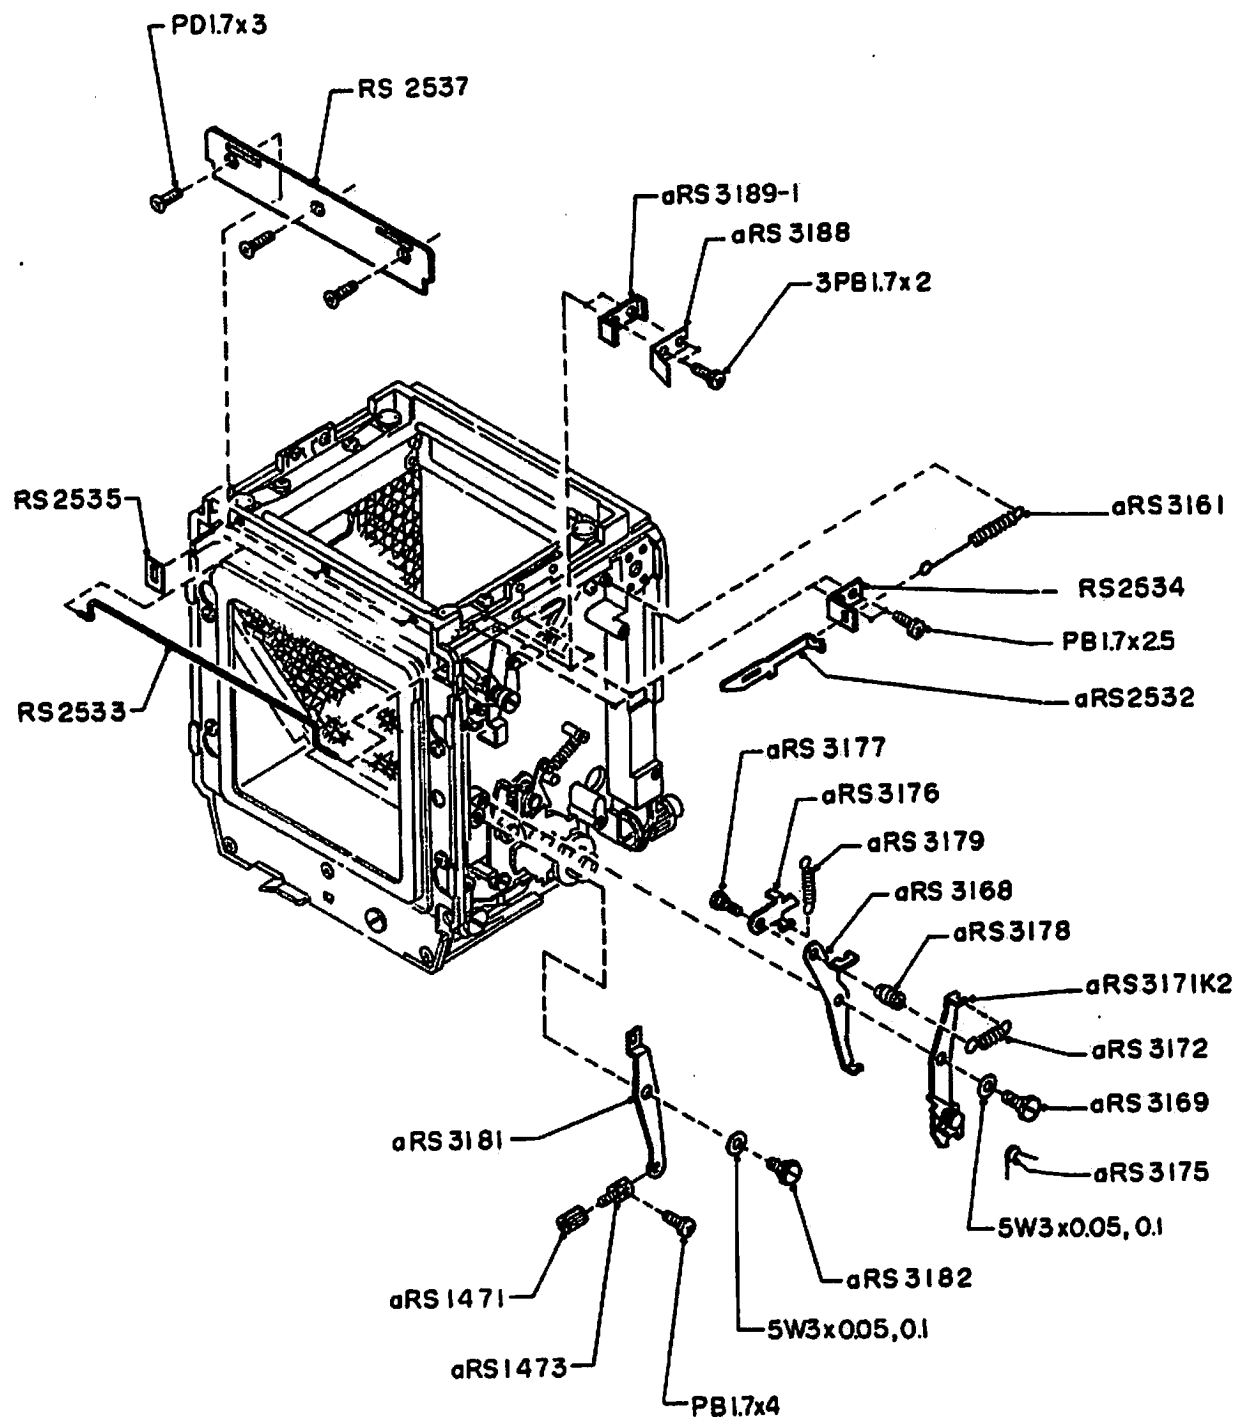


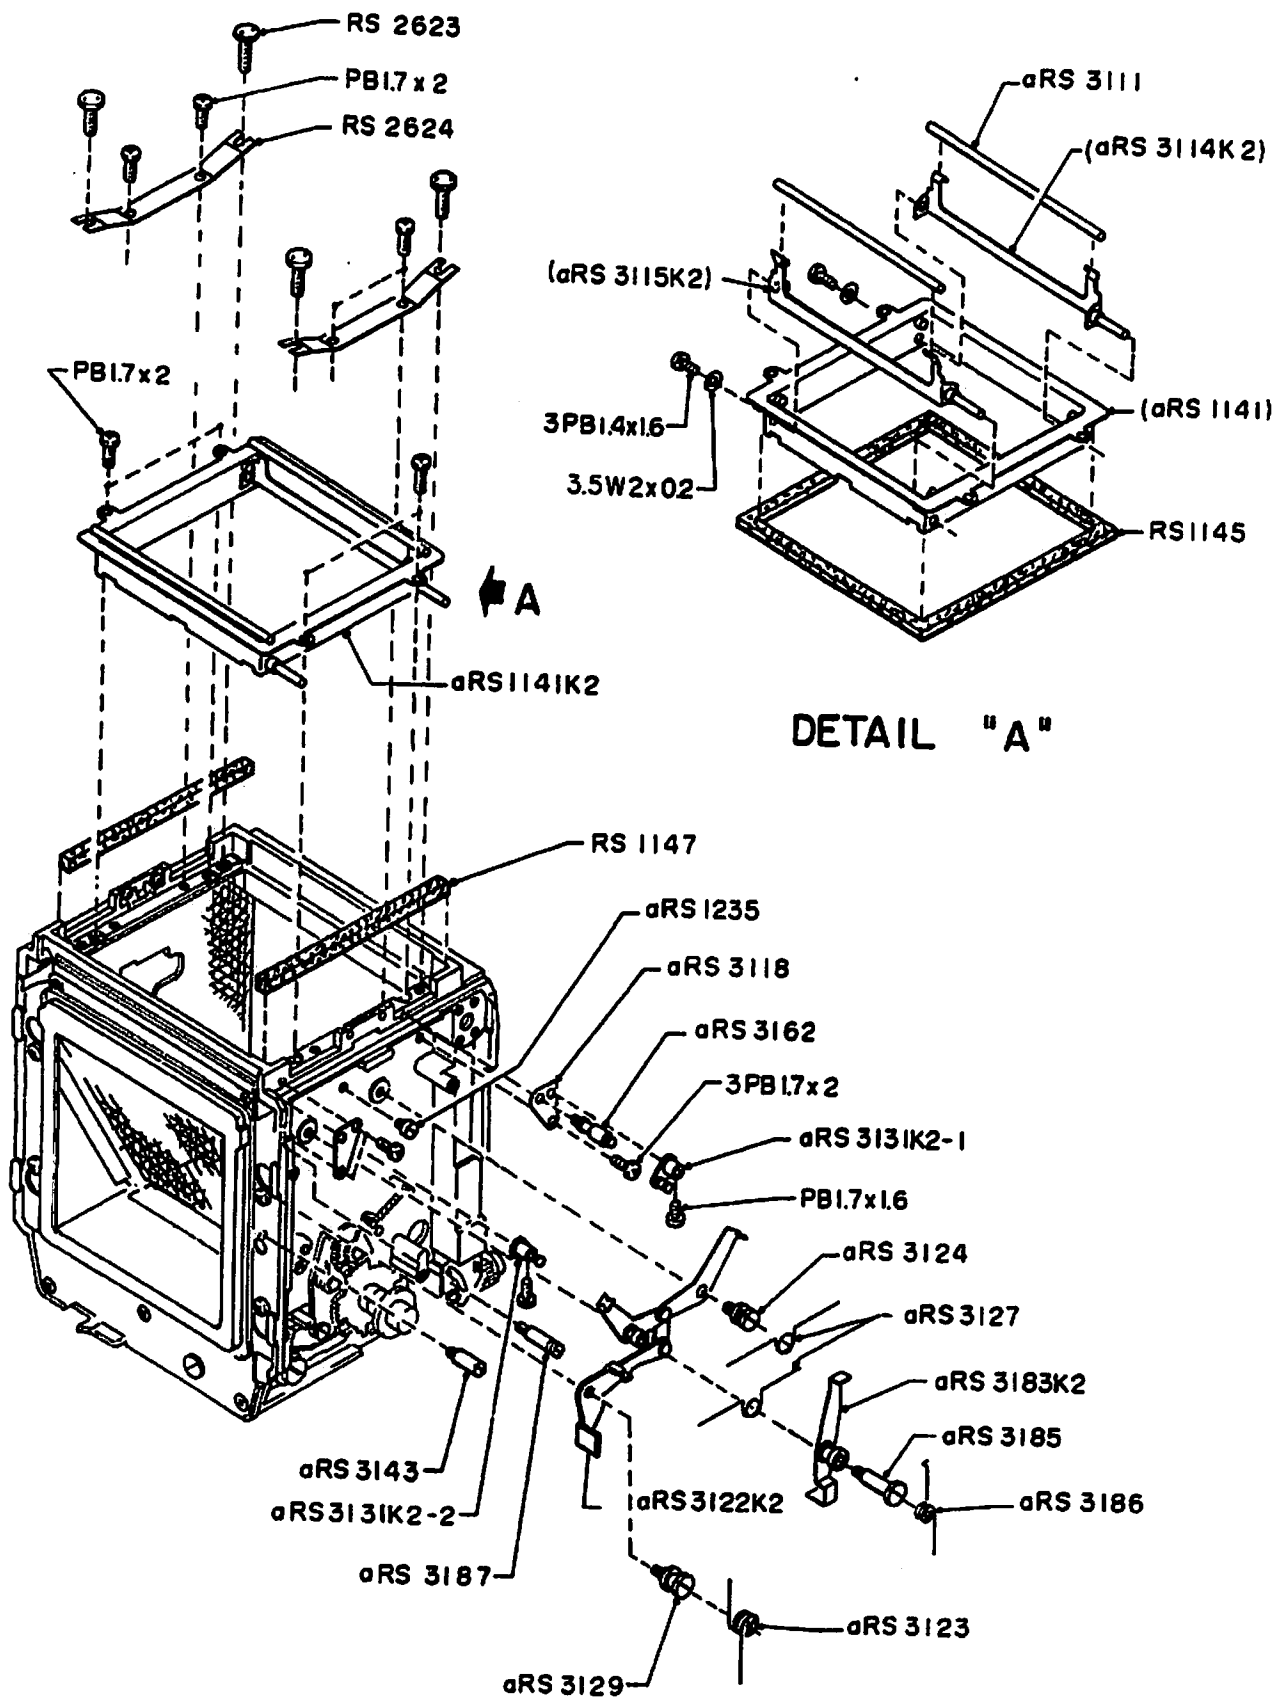

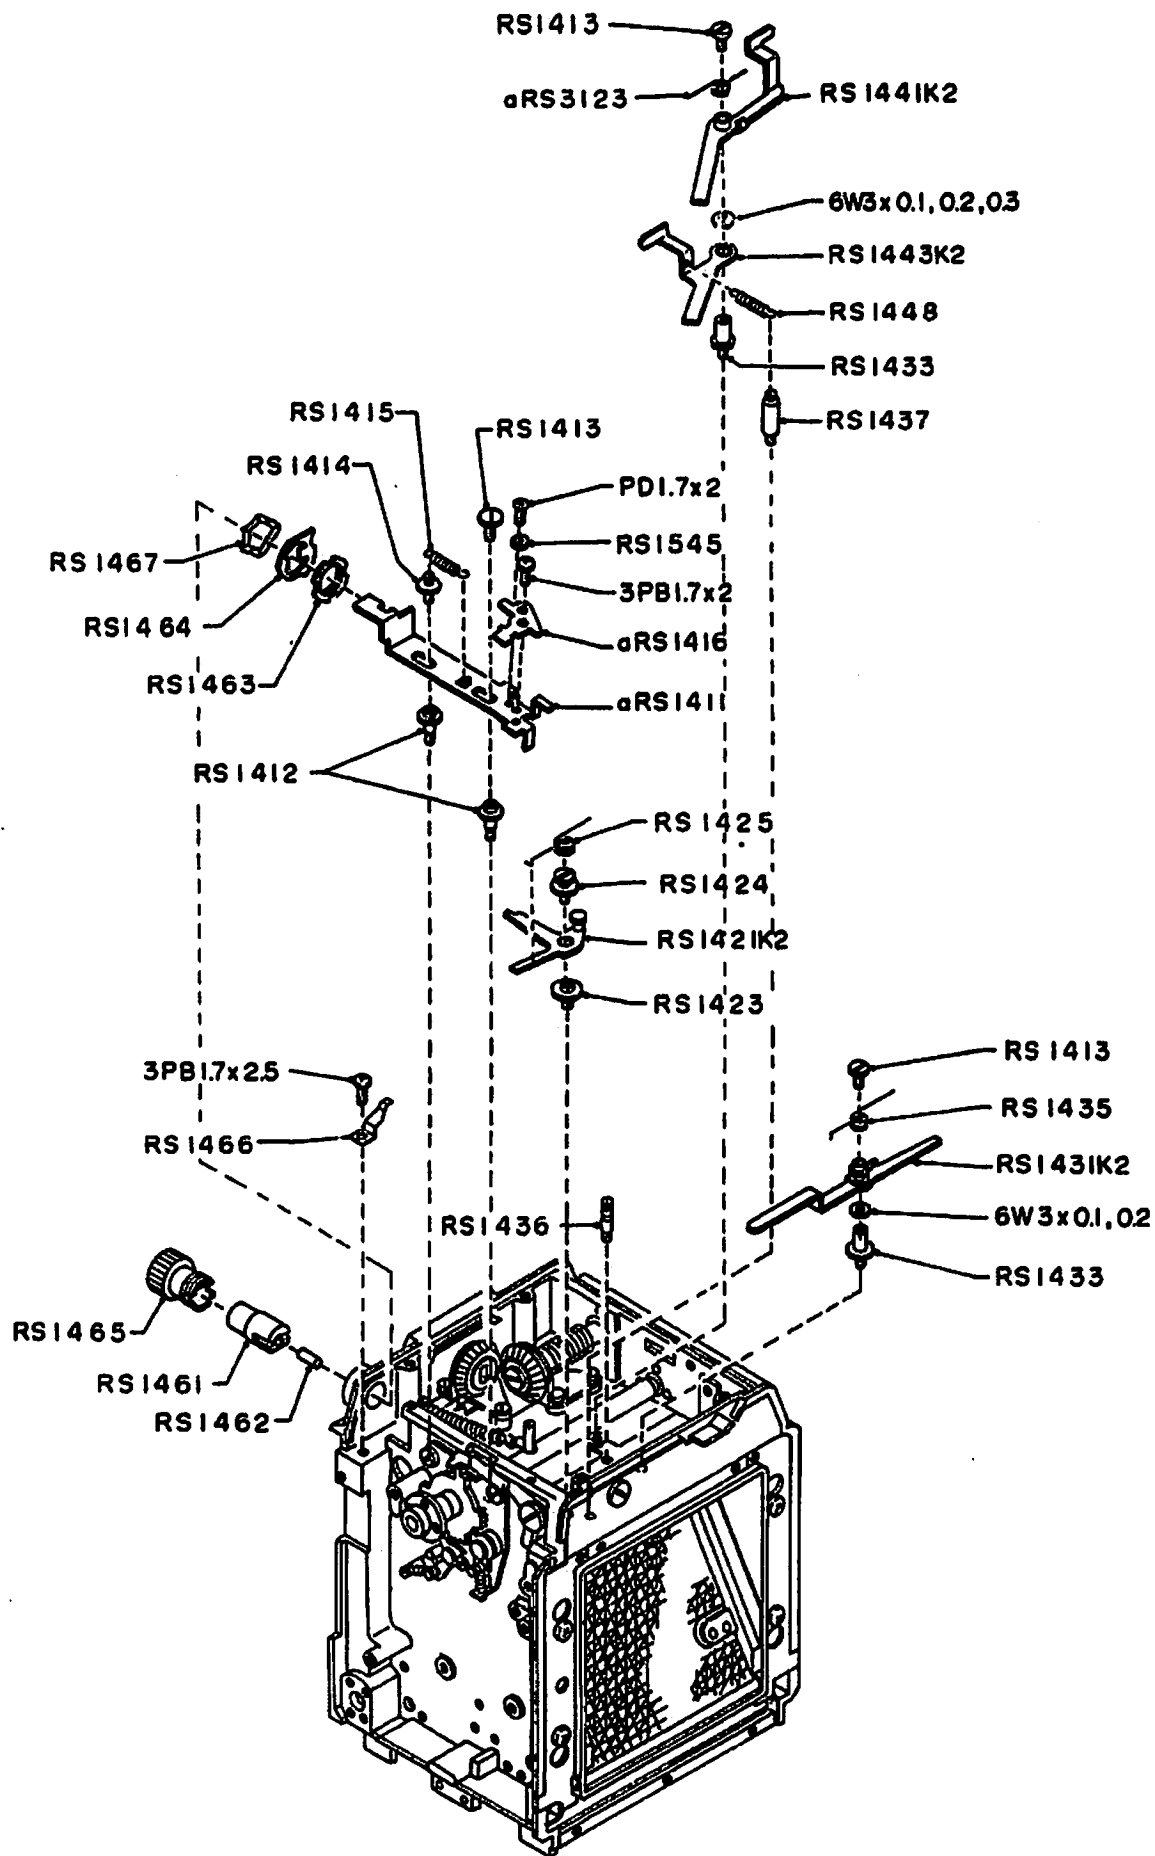


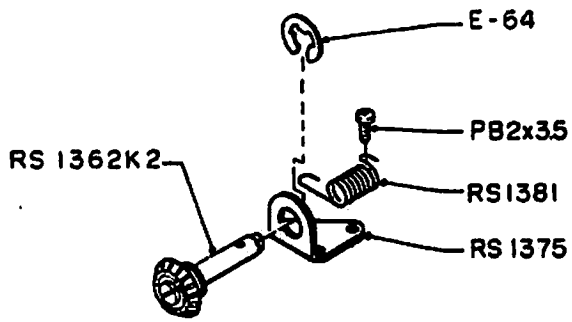



DETAIL "A"

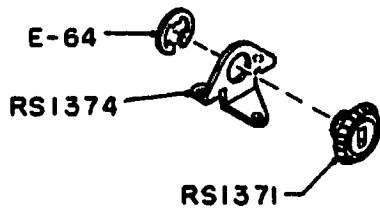


DETAIL "B"

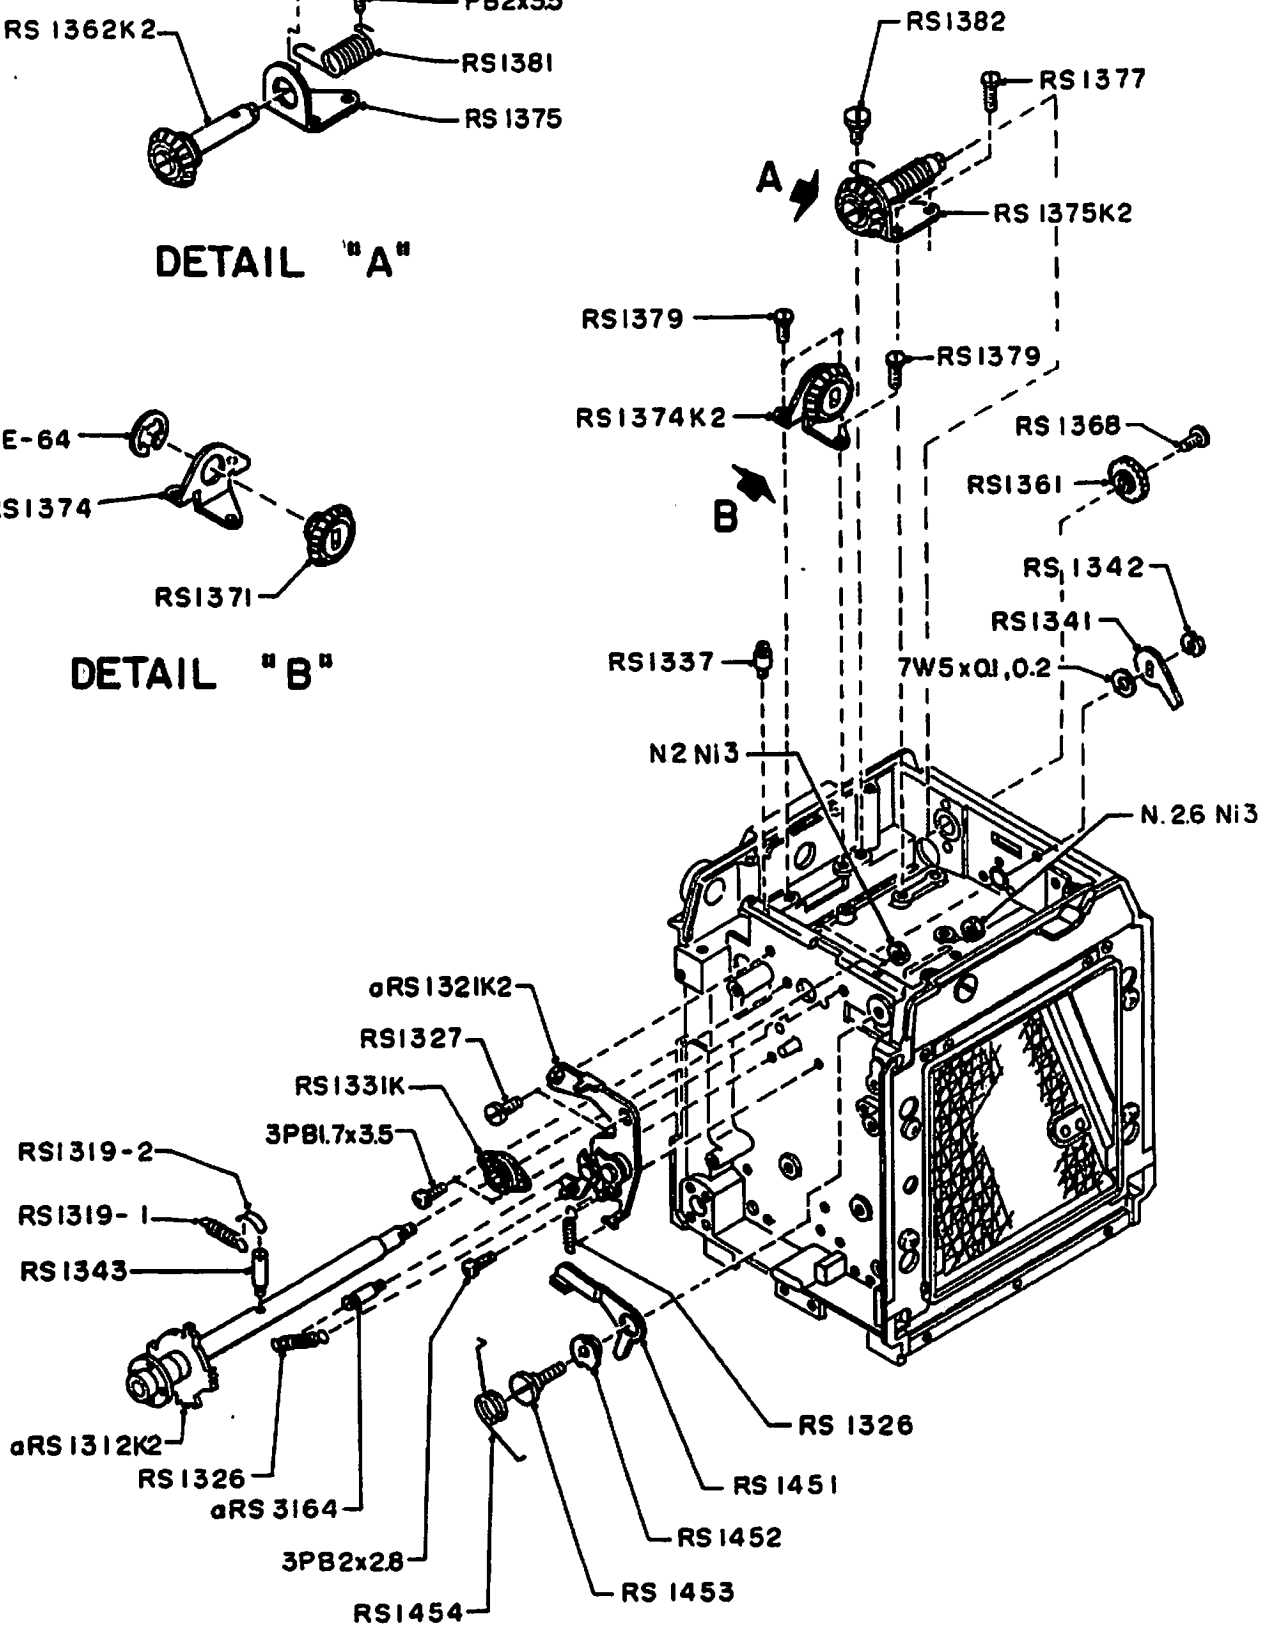


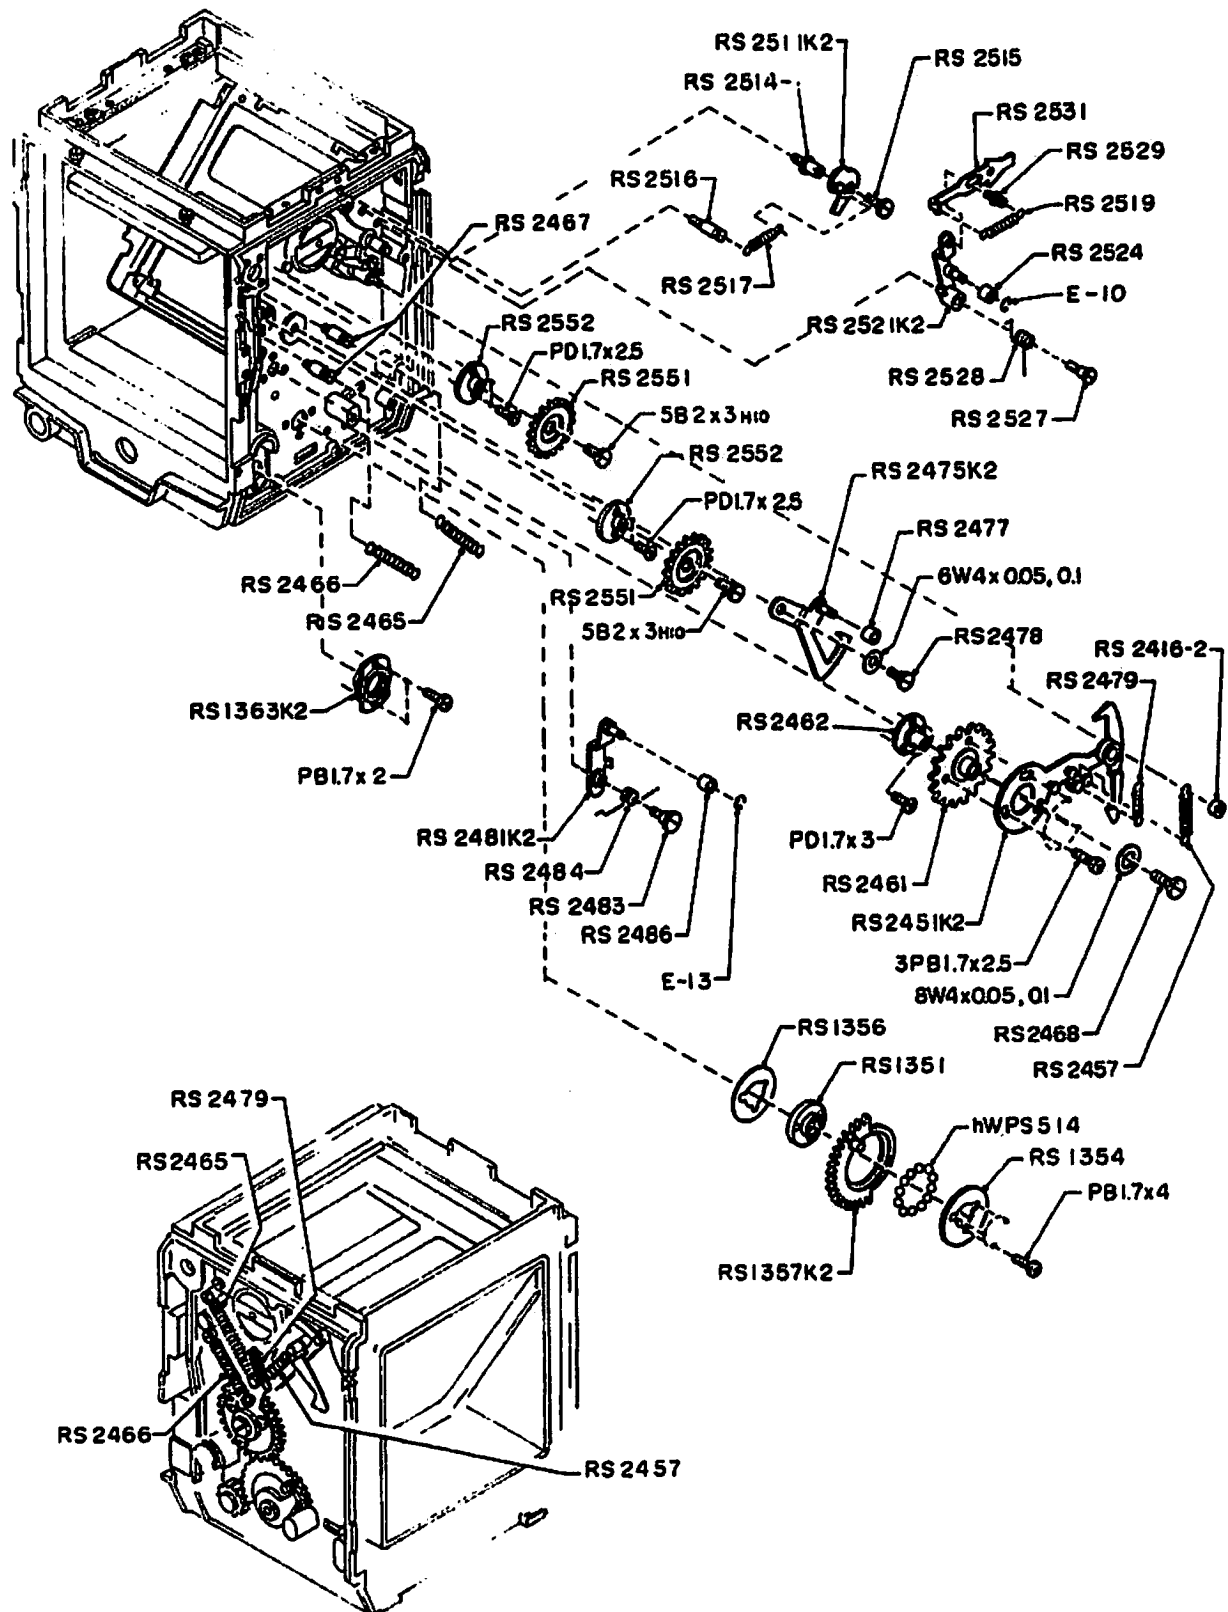

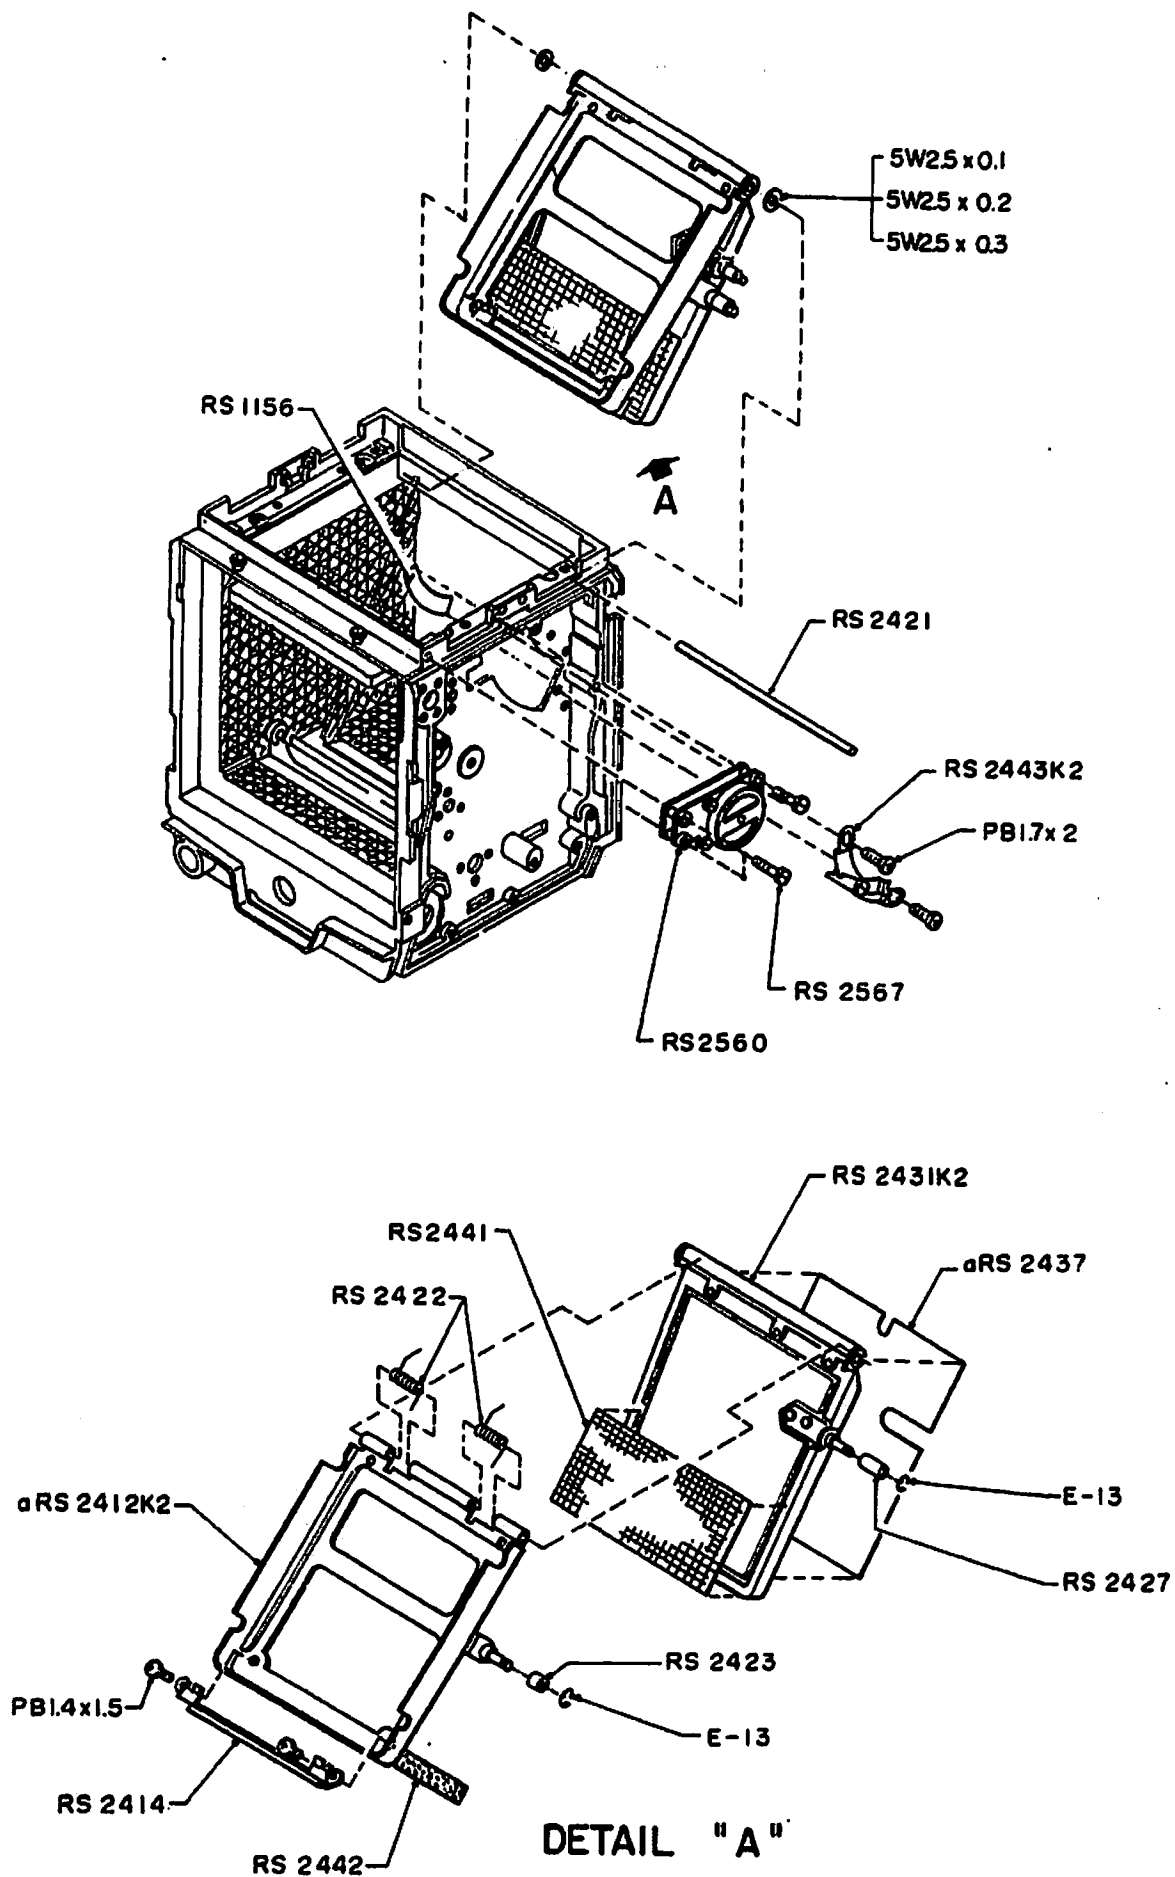

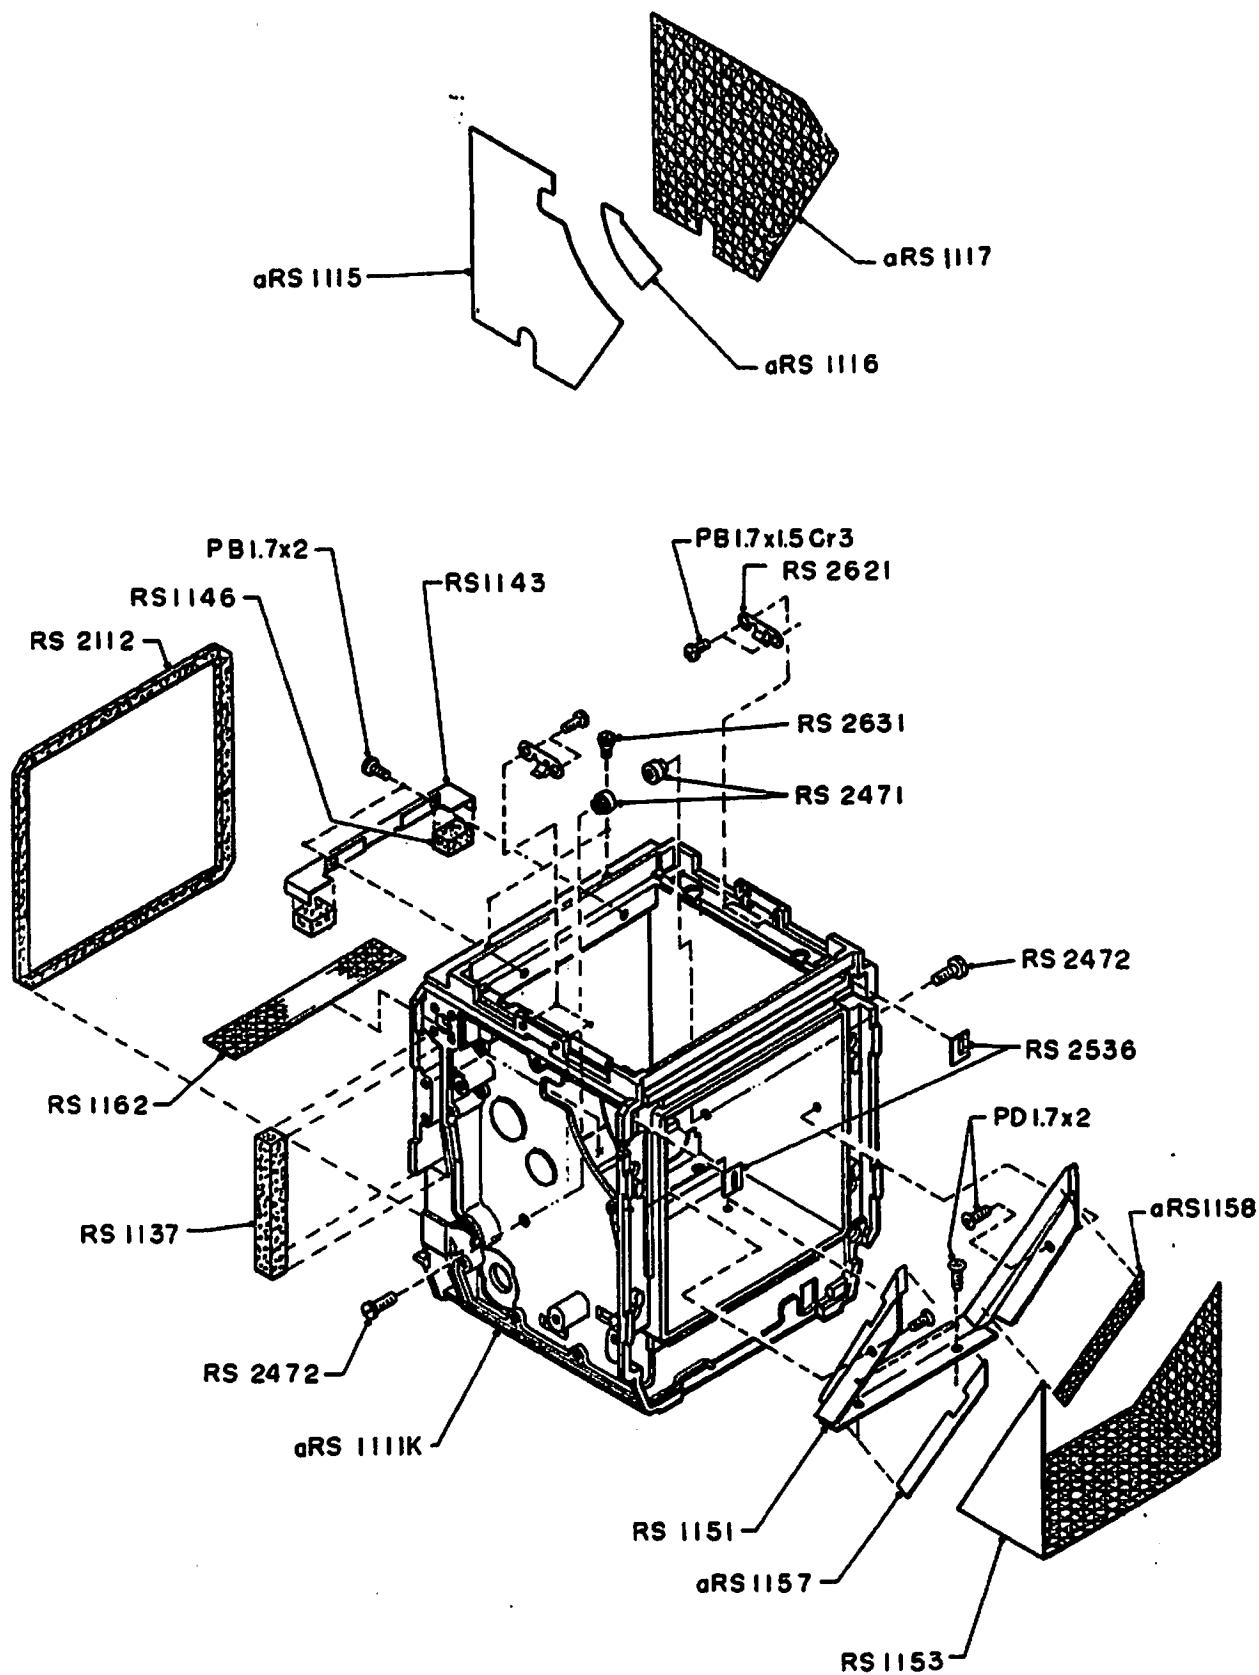



# Focusing Hood

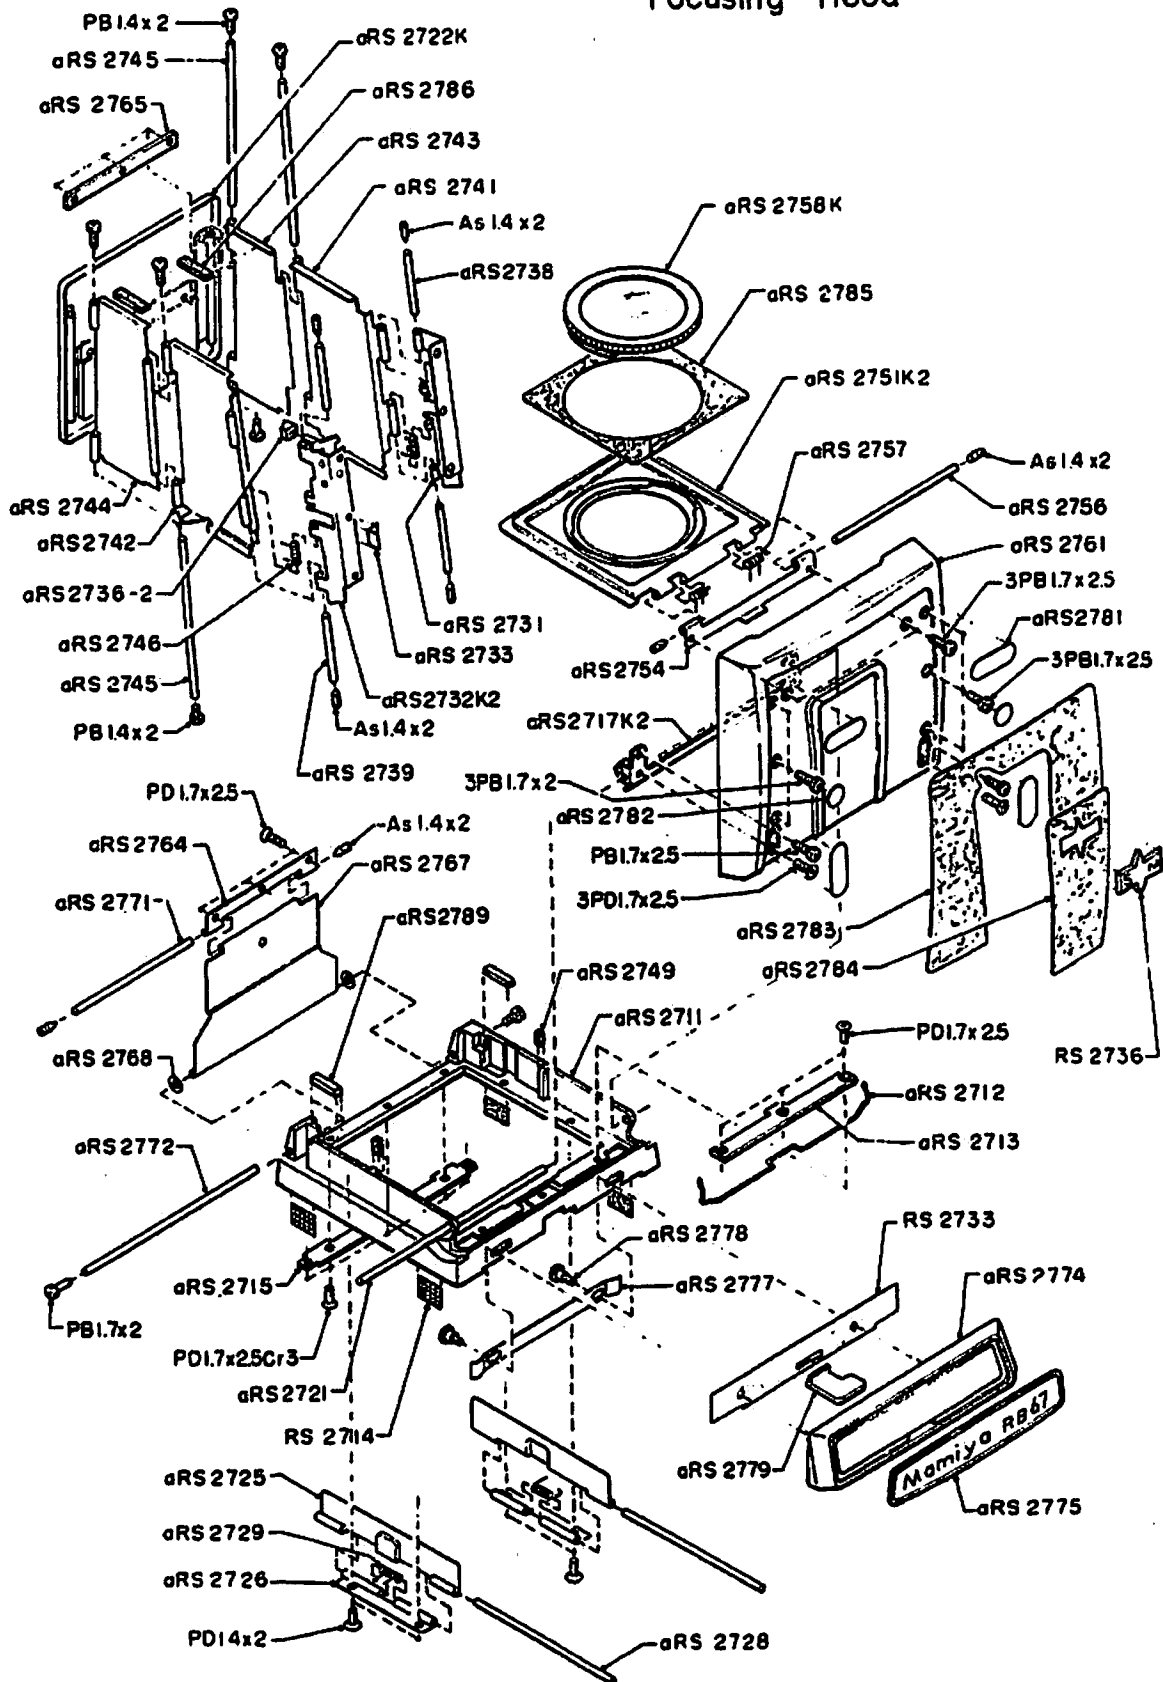




# Revolving Adapter

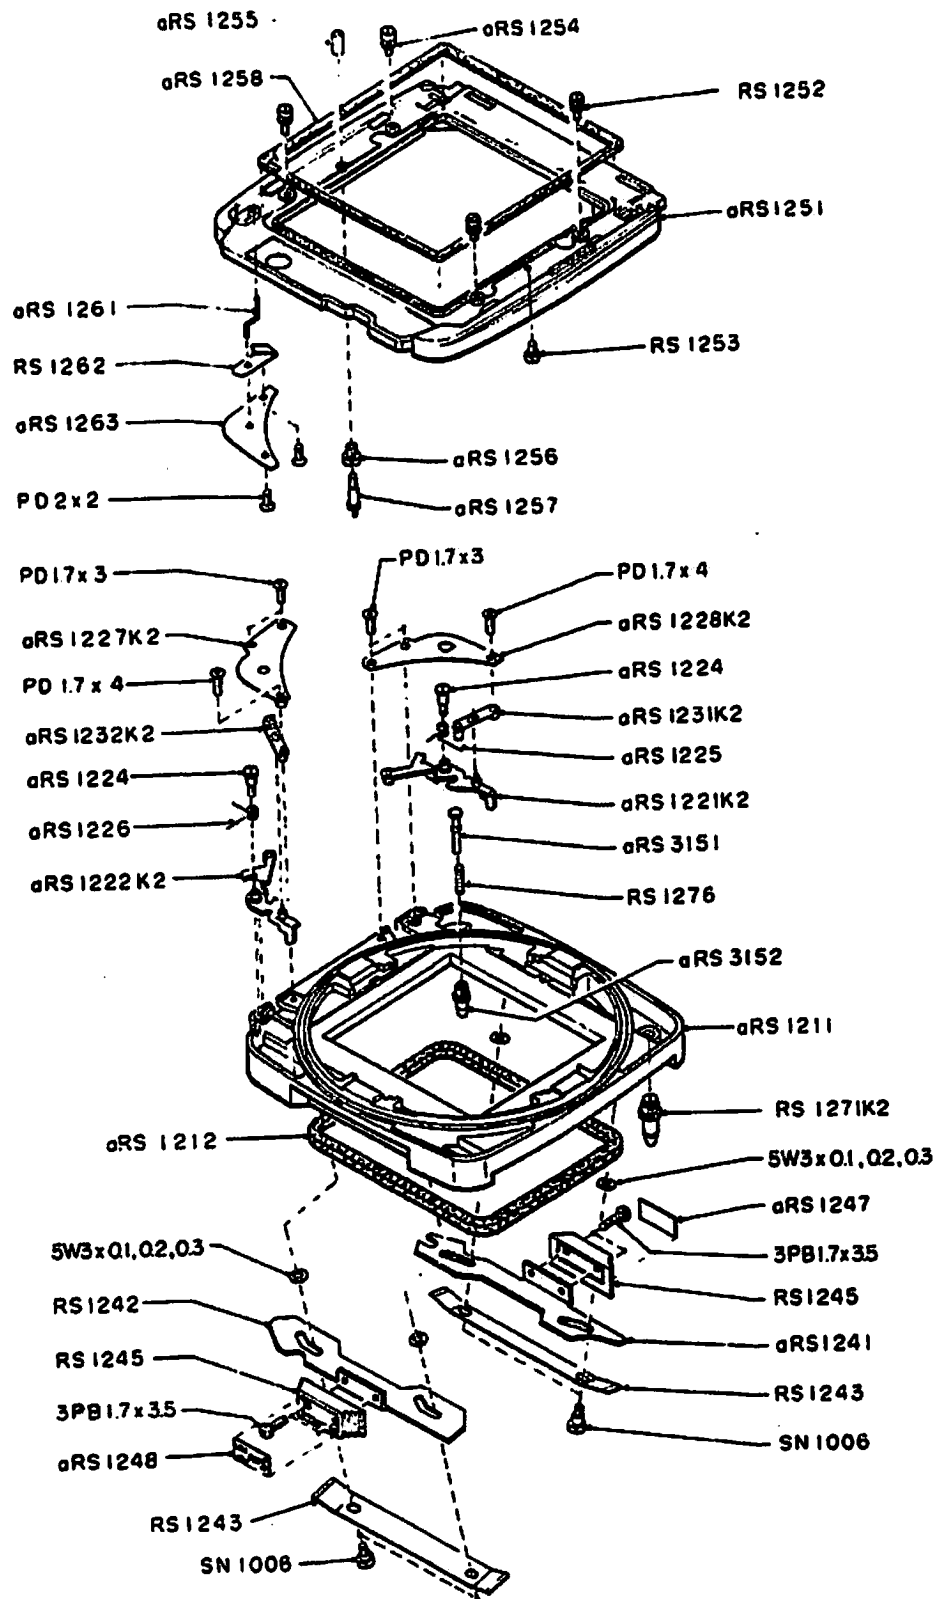

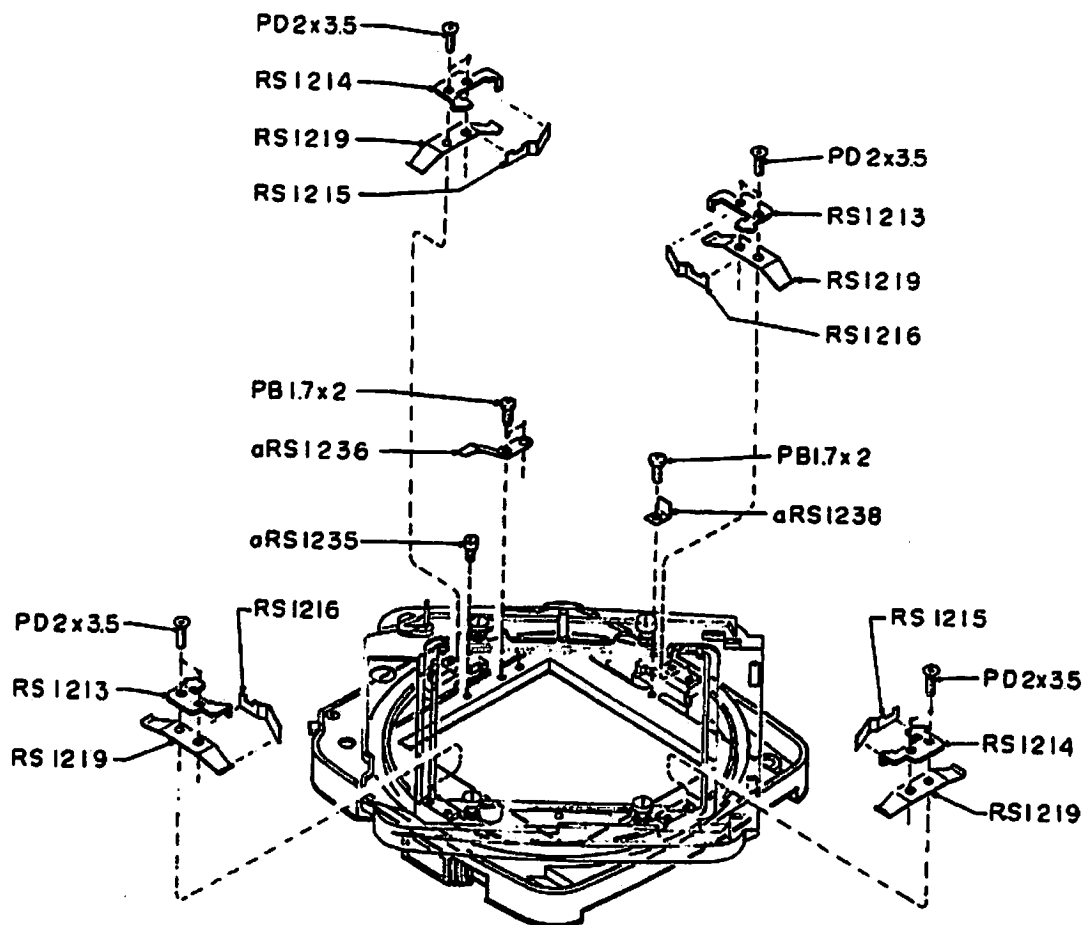

# Roof Film Holder for mamiya RB67 proS

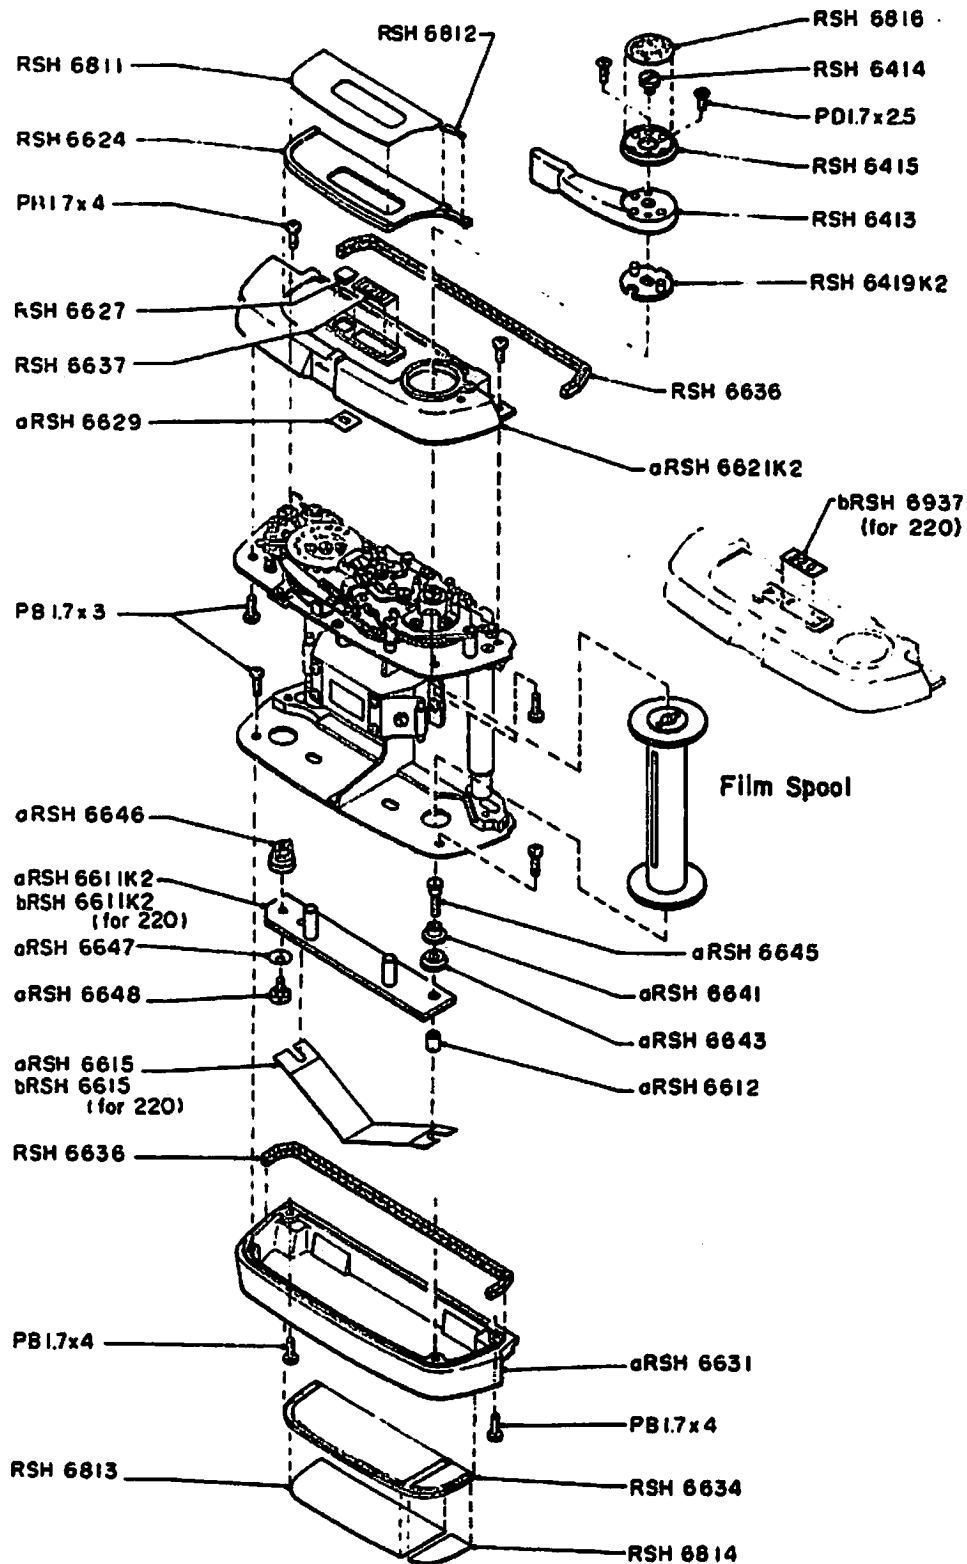

3PB1.4x3.5

aRSH 6493

aRSH 6484K2

aRSH 6485K2

RHL 1521

aRSH 6483

aRSH 6491

3PB1.4x3.5

RSH 6495

3PB1.4x3.5

### DETAIL "A"

PD1.7x25

aRSH 7157

3PB1.7x1.8

aRSH 7151

aRSH 7153K2

RSH 6498

A

for 220

bRSH 6993  
(for 220)

bRSH 6984K2  
(for 220)

bRSH 6985K2  
(for 220)

bRSH 6991  
(for 220)

aRSH 7175

aRSH 7176

RS 2615

aRSH 7171

aRSH 7173

aRSH 7179

aRSH 7178

aRSH 7177K2

aRSH 7134

3PB1.7x1.8

aRSH 7131K2

aRSH 7137

3PB1.7x2

aRSH 7144K2

aRSH 7119

3PB1.4x2


aRSH 7168


aRSH 7161K2





aRSH 7123

aRSH 7122

aRSH 7121

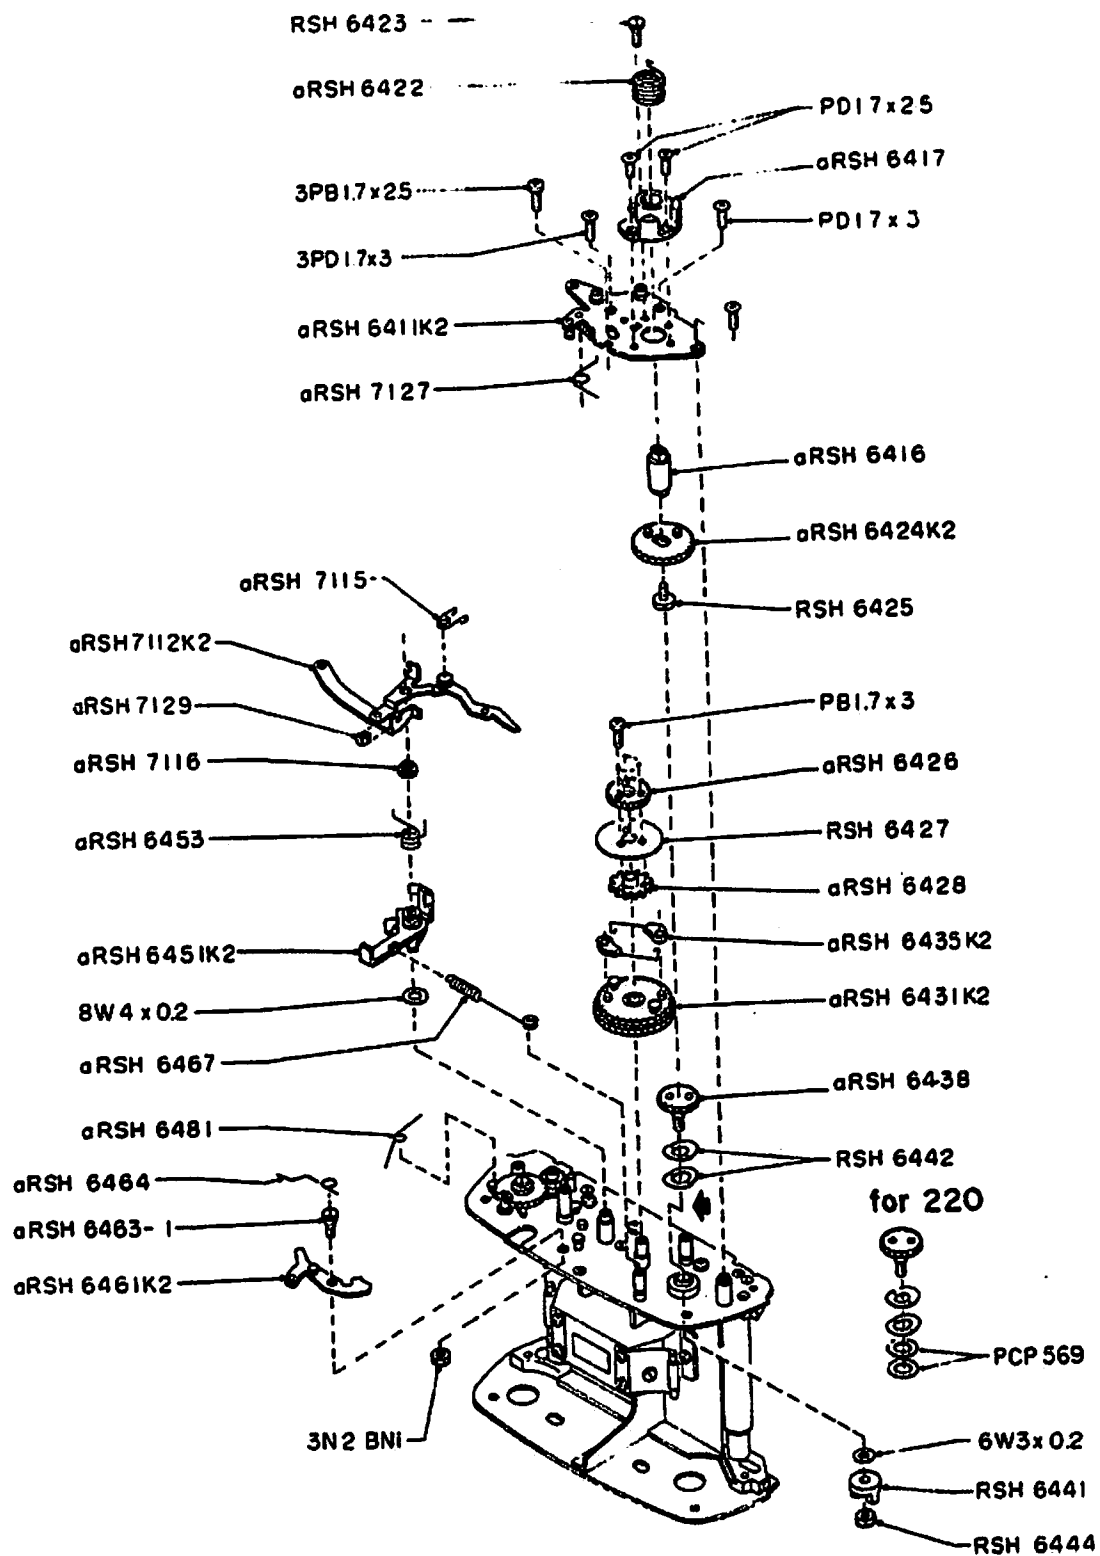

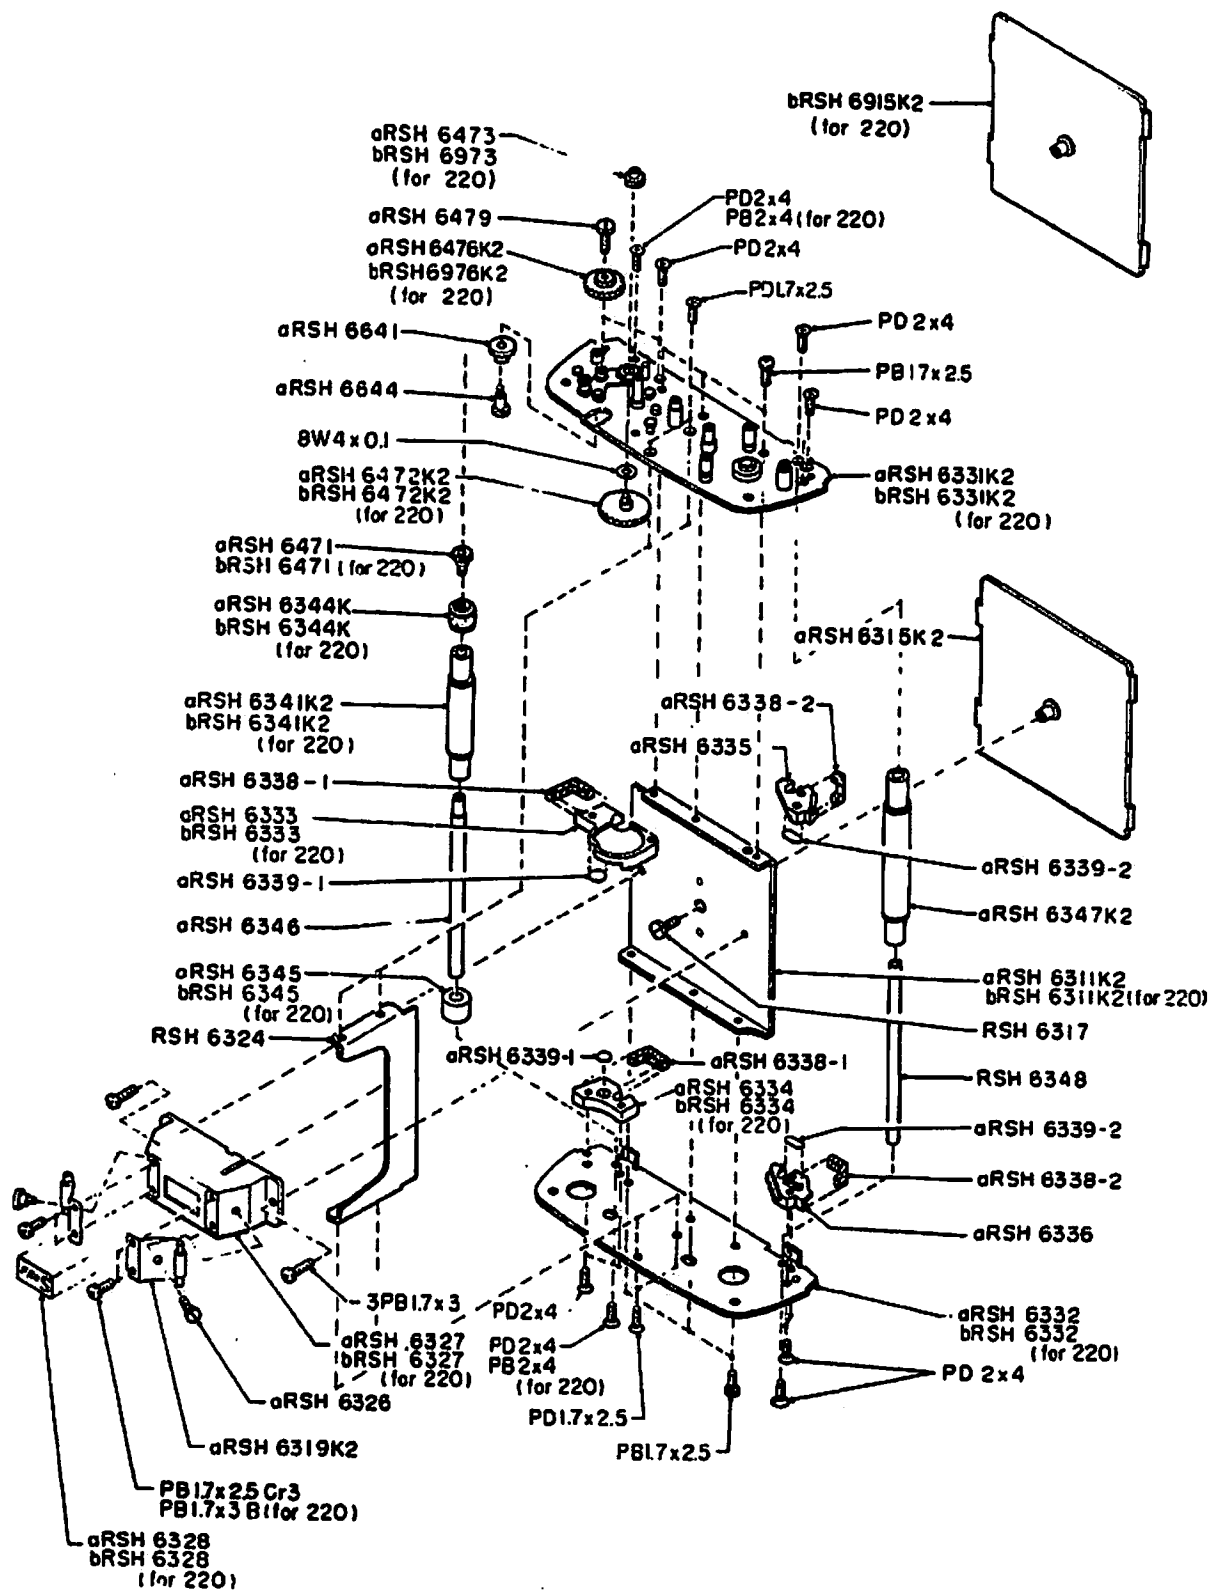

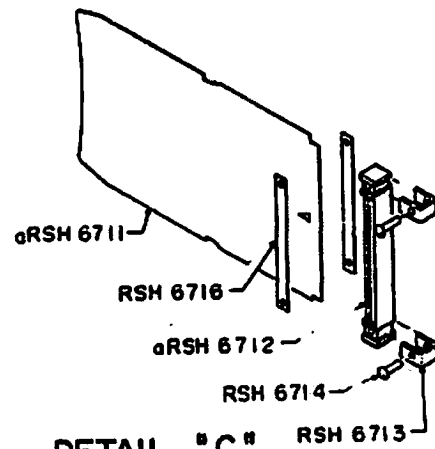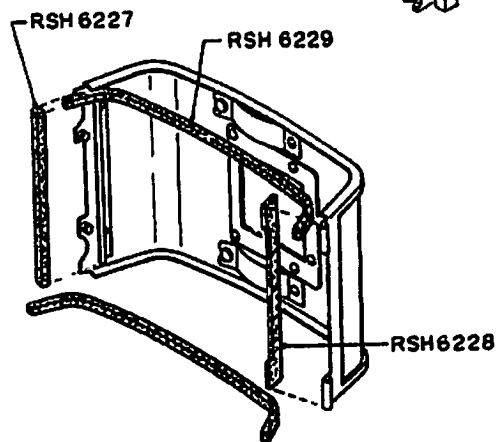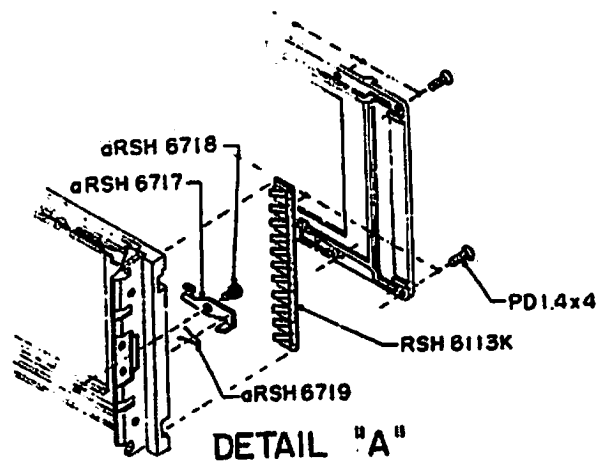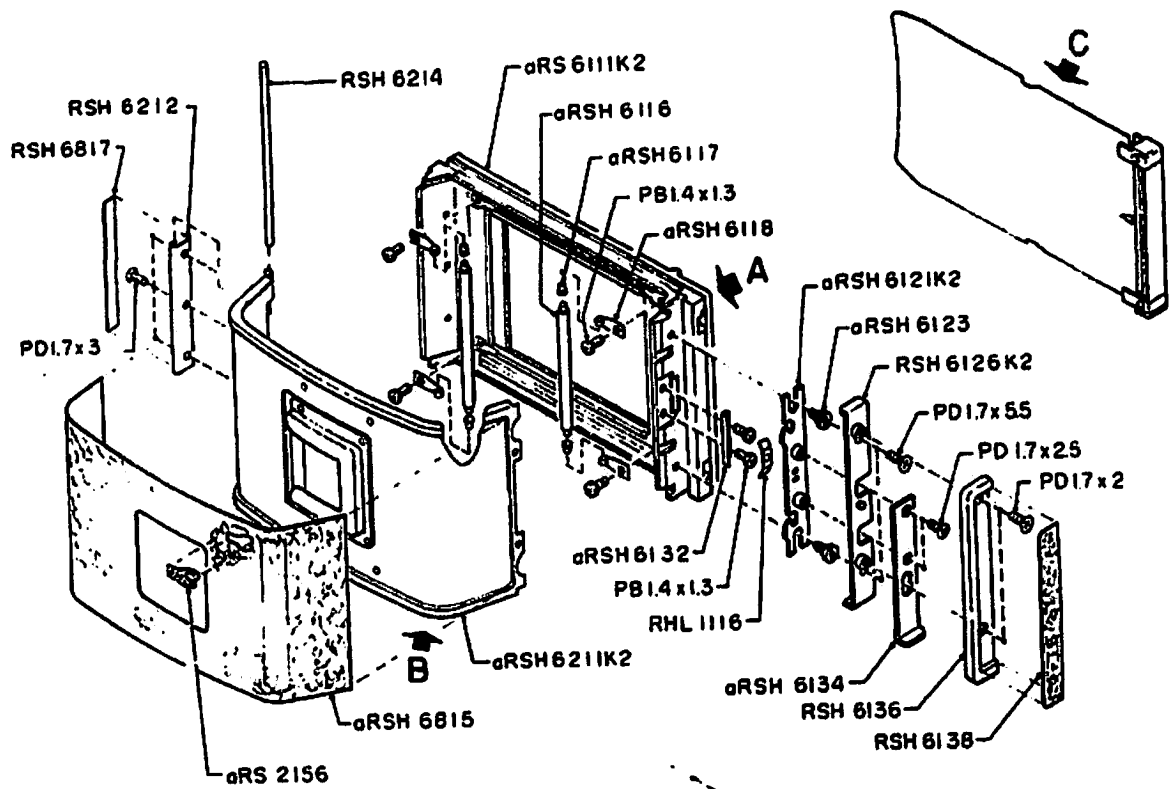

## PARTS LIST

### METHOD OF REQUESTING SPARE PARTS FOR REPAIR USE

When ordering spare parts for repair purposes, mark the request in the following manner after referring to our parts lists.

Spare parts are divided as follows:

|   |   |
|---|---|
| Not considered usable for repairing ..... | x |
| Can be supplied .....                     | o |

Parts marked with " \* " in the column of term of sale will be charged,

NOTE: When ordering spare parts, always type the complete code and numbers in the Parts No. column of the appropriate parts lists.



Mamiya RB67 ProS (aRS)

| Parts No. |     | Description               | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|---------------------------|------|--------------|--------------------|
| aRS1111K  | (G) | Camera body               | 1    | 13           | x                  |
| aRS1115   | (A) | Reflection absorber paper | 1    | 13           | 0                  |
| aRS1116   | (A) | Reflection absorber paper | 1    | 13           | 0                  |
| aRS1117   | (A) | Reflection absorber paper | 1    | 13           | 0                  |
| RS1122    | (B) | Light baffle frame        | 1    | 5            | 0                  |
| aRS1131   | (B) | Rear light baffle frame   | 1    | 3            | 0                  |
| aRS1133   | (A) | Light baffle plate, upper | 1    | 2            | 0                  |
| RS1134    | (F) | Light baffle plate, lower | 1    | 2            | 0                  |
| RS1135    | (B) | Post screw                | 1    | 2            | 0                  |
| RS1137    | (A) | Light baffle              | 1    | 13           | 0                  |
| RS1138    | (A) | Light baffle              | 1    | 2            | 0                  |
| RS1139    | (A) | Light baffle              | 1    | 2            | 0                  |
| aRS1141K2 | (C) | Frame for red bar assy.   | 1    | 8            | 0                  |
| RS1143    | (C) | Light baffle cover        | 1    | 13           | 0                  |
| RS1146    | (B) | Cushion                   | 2    | 13           | 0                  |
| RS1147    | (B) | Light baffle              | 2    | 8            | 0                  |
| RS1151    | (F) | Light frame               | 1    | 13           | 0                  |
| RS1153    | (B) | Reflection absorber paper | 1    | 13           | 0                  |
| RS1156    | (B) | Reflection absorber paper | 1    | 12           | 0                  |
| aRS1157   | (A) | Reflection absorber paper | 1    | 13           | 0                  |
| aRS1158   | (A) | Reflection absorber paper | 1    | 13           | 0                  |
| RS1162    | (B) | Reflection absorber paper | 1    | 13           | 0                  |
| RS1171    | (P) | Strap lug                 | 2    | 1 & 2        | 0                  |
| RS1172    | (B) | Nut                       | 2    | 1 & 2        | 0                  |

Revolving Adapter (aRS1200)

| Parts No. |     | Description             | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|-------------------------|------|--------------|--------------------|
| aRS1211   | (G) | Revolving back panel    | 1    | 15           | x                  |
| aRS1212   | (B) | Light baffle            | 1    | 15           | 0                  |
| RS1213    | (F) | Catch angle - A         | 2    | 16           | 0                  |
| RS1214    | (F) | Catch angle - B         | 2    | 16           | 0                  |
| RS1215    | (C) | Click spring - A        | 2    | 16           | 0                  |
| RS1216    | (C) | Click spring - B        | 2    | 16           | 0                  |
| RS1219    | (C) | Spring plate            | 4    | 16           | 0                  |
| aRS1221K2 | (B) | Lock lever - A          | 1    | 15           | 0                  |
| aRS1222K2 | (B) | Lock lever - B          | 1    | 15           | 0                  |
| aRS1224   | (A) | Shaft                   | 2    | 15           | 0                  |
| aRS1225   | (B) | Spring - A              | 1    | 15           | 0                  |
| aRS1226   | (B) | Spring - B              | 1    | 15           | 0                  |
| aRS1227K2 | (A) | Cover plate - A         | 1    | 15           | 0                  |
| aRS1228K2 | (A) | Cover plate - B         | 1    | 15           | 0                  |
| aRS1231K2 | (A) | Release lock lever - A  | 1    | 15           | 0                  |
| aRS1232K2 | (A) | Release lock lever - B  | 1    | 15           | 0                  |
| aRS1235   | (A) | Post screw              | 2    | 8 & 16       | 0                  |
| aRS1236   | (A) | Spring                  | 1    | 16           | 0                  |
| aRS1238   | (A) | Bracket                 | 1    | 16           | 0                  |
| aRS1241   | (A) | Slide lock, upper       | 1    | 15           | 0                  |
| RS1242    | (D) | Slide lock, lower       | 1    | 15           | 0                  |
| RS1243    | (B) | Leaf spring             | 2    | 15           | 0                  |
| SN1006    |     | Shoulder screw          | 4    | 15           | 0                  |
| RS1245    | (C) | Slide lock knob         | 2    | 15           | 0                  |
| aRS1247   | (C) | Mark plate upper        | 1    | 15           | 0                  |
| aRS1248   | (C) | Mark plate lower        | 1    | 15           | 0                  |
| aRS1251   | (D) | Revolving adapter panel | 1    | 15           | x                  |
| RS1252    | (C) | Lock pin                | 3    | 15           | 0                  |
| RS1253    | (G) | Stopper                 | 1    | 15           | 0                  |
| aRS1254   | (B) | Lock pin - B            | 1    | 15           | 0                  |
| aRS1255   | (D) | Horizontal changing bar | 1    | 15           | 0                  |
| aRS1256   | (C) | Guide                   | 1    | 15           | 0                  |
| aRS1257   | (B) | Horizontal changing pin | 1    | 15           | 0                  |

| Parts No. |     | Description        | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|--------------------|------|--------------|--------------------|
| aRS1258   | (A) | Sealing strip      | 1    | 15           | 0                  |
| aRS1261   | (D) | Release lock bar   | 1    | 15           | 0                  |
| RS1262    | (E) | Spring             | 1    | 15           | 0                  |
| aRS1263   | (A) | Plate              | 1    | 15           | 0                  |
| RS1271K2  | (B) | Coupling pin assy. | 1    | 15           | 0                  |
| aRS3151   | (D) | Warning signal pin | 1    | 15           | 0                  |
| aRS3152   | (B) | Sleeve             | 1    | 15           | 0                  |
| RS1276    | (B) | Spring             | 1    | 15           | 0                  |

Mamiya RB67 ProS (aRS)

| <i>Parts No.</i> |     | <i>Description</i>  | <i>Pcs.</i> | <i>Ref.<br/>Page</i> | <i>Term<br/>of<br/>Sale</i> |
|------------------|-----|---------------------|-------------|----------------------|-----------------------------|
| RS1311           | (J) | Cocking lever       | 1           | 4                    | 0                           |
| aRS1312K2        | (N) | Cocking lever shaft | 1           | 10                   | 0                           |
| RS1319-1         | (D) | Spring              | 1           | 10                   | 0                           |
| RS1319-2         | (A) | Ring                | 1           | 10                   | 0                           |
| aRS1321K2        | (G) | Cocking base plate  | 1           | 10                   | 0                           |
| N2N13            |     | Nut                 | 2           | 10                   | 0                           |
| RS1326           | (C) | Spring              | 2           | 10                   | 0                           |
| RS1327           | (C) | Screw               | 2           | 10                   | 0                           |
| RS1329           | (E) | Button cover        | 1           | 4                    | 0                           |
| RS1331K          | (F) | Hub                 | 1           | 10                   | 0                           |
| RS1337           | (A) | Anchor              | 1           | 10                   | 0                           |
| RS1341           | (B) | Arm                 | 1           | 10                   | 0                           |
| RS1342           | (D) | Nut                 | 1           | 10                   | 0                           |
| RS1343           | (C) | Pin                 | 1           | 10                   | 0                           |
| RS1351           | (D) | Bushing             | 1           | 11                   | 0                           |
| hwps514          |     | Steel ball          | 42          | 4 & 11               | 0                           |
| RS1354           | (C) | Cover ring          | 1           | 11                   | 0                           |
| RS1356           | (B) | Washer              | 1           | 11                   | 0                           |
| RS1357K2         | (G) | Cocking gear        | 1           | 11                   | 0                           |
| RS1361           | (D) | Gear                | 1           | 10                   | 0                           |
| RS1363K          | (D) | Hub                 | 1           | 11                   | 0                           |
| RS1368           | (B) | Screw               | 1           | 10                   | 0                           |
| RS1374K2         | (D) | Bevel gear          | 1           | 10                   | 0                           |
| RS1375K2         | (D) | Bevel gear          | 1           | 10                   | 0                           |
| RS1377           | (C) | Screw               | 2           | 10                   | 0                           |
| RS1379           | (A) | Shoulder screw      | 3           | 10                   | 0                           |
| RS1382           | (C) | Anchor screw        | 1           | 10                   | 0                           |
| aRS1411          | (C) | Release plate       | 1           | 9                    | 0                           |
| RS1412           | (B) | Lever shaft         | 2           | 9                    | 0                           |
| RS1413           | (B) | Screw               | 3           | 9                    | 0                           |
| RS1414           | (B) | Anchor screw        | 1           | 9                    | 0                           |
| RS1415           | (B) | Spring              | 1           | 9                    | 0                           |

| Parts No. |     | Description              | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|--------------------------|------|--------------|--------------------|
| aRS1416   | (B) | Release plate supporting | 1    | 9            | 0                  |
| RS1421K2  | (D) | Stop lever               | 1    | 9            | 0                  |
| RS1423    | (C) | Shaft                    | 1    | 9            | 0                  |
| RS1424    | (B) | Anchor screw             | 1    | 9            | 0                  |
| RS1425    | (B) | Spring                   | 1    | 9            | 0                  |
| RS1431K2  | (D) | Release lever            | 1    | 9            | 0                  |
| RS1433    | (A) | Shaft                    | 2    | 9            | 0                  |
| RS1435    | (A) | Spring                   | 1    | 9            | 0                  |
| RS1436    | (A) | Anchor                   | 1    | 9            | 0                  |
| RS1437    | (A) | Anchor                   | 1    | 9            | 0                  |
| RS1441K2  | (A) | Upper release lever      | 1    | 9            | 0                  |
| RS1443K2  | (A) | Lower release lever      | 1    | 9            | 0                  |
| RS1448    | (C) | Spring                   | 1    | 9            | 0                  |
| RS1451    | (J) | Stop lever               | 1    | 10           | 0                  |
| RS1452    | (E) | Hub                      | 1    | 10           | 0                  |
| RS1453    | (D) | Shoulder screw           | 1    | 10           | 0                  |
| RS1454    | (D) | Spring                   | 1    | 10           | 0                  |
| N2.6N13   |     | Nut                      | 1    | 3            | 0                  |
| RS1461    | (G) | Release button           | 1    | 9            | 0                  |
| RS1462    | (B) | Release lod              | 1    | 9            | 0                  |
| RS1463    | (C) | Nut                      | 1    | 9            | 0                  |
| RS1464    | (E) | Retaining ring           | 1    | 9            | 0                  |
| RS1465    | (F) | Locking hub              | 1    | 9            | 0                  |
| RS1466    | (D) | Spring                   | 1    | 9            | 0                  |
| RS1467    | (D) | Spring washer            | 1    | 9            | 0                  |
| aRS1471   | (D) | Nut                      | 1    | 7            | 0                  |
| aRS1473   | (B) | R.L bar                  | 1    | 7            | 0                  |
| aRS1481   | (E) | Setting lever            | 1    | 6            | 0                  |
| aRS1483   | (C) | Spring                   | 1    | 6            | 0                  |
| aRS1486   | (B) | Setting ring             | 1    | 6            | 0                  |
| aRS1487   | (B) | Stopper                  | 1    | 6            | 0                  |
| aRS1511   | (D) | Focusing knob            | 2    | 5 & 6        | 0                  |
| FC4662    | (A) | Nut                      | 2    | 5 & 6        | 0                  |
| aRS1513   | (C) | Cover                    | 2    | 5 & 6        | 0                  |
| aRS1521   | (C) | Pinion shaft             | 1    | 5            | 0                  |
| RS1524    | (B) | Pipe                     | 2    | 5 & 6        | 0                  |

| <b>Parts No.</b> |     | <b>Description</b>   | <b>Pcs.</b> | <b>Ref.<br/>Page</b> | <b>Term<br/>of<br/>Sale</b> |
|------------------|-----|----------------------|-------------|----------------------|-----------------------------|
| SN149            |     | Set screw            | 3           | 5                    | 0                           |
| aRS1526          | (C) | Bushing, right       | 1           | 6                    | 0                           |
| aRS1527          | (C) | Bushing, left        | 1           | 5                    | 0                           |
| aRS1528          | (B) | Set screw            | 3           | 6                    | 0                           |
| aRS1531          | (G) | Guide plate, right   | 1           | 5                    | 0                           |
| aRS1532          | (F) | Guide plate, left    | 1           | 5                    | 0                           |
| aRS1534          | (B) | Hold plate           | 2           | 5                    | 0                           |
| aRS1541          | (C) | Rack plate, right    | 1           | 5                    | 0                           |
| aRS1542          | (D) | Rack plate, left     | 1           | 5                    | 0                           |
| RS1545           | (A) | Eccentric stopper    | 7           | 4, 5 & 9             | 0                           |
| aRS1547          | (B) | Distance scale plate | 1           | 1                    | 0                           |
| RS1549           | (A) | Washer               | 0 - 2       | 5                    | 0                           |
| RS1551K          | (B) | Bellows              | 1           | 5                    | 0                           |
| EFC4614          | (E) | Accessory shoe       | 1           | 2                    | 0                           |
| EFC4628          |     | Shoe cover           | 1           | 2                    | 0                           |
| EFC4615          | (A) | Stopper              | 1           | 2                    | 0                           |
| aRS1565          | (B) | Base                 | 1           | 2                    | 0                           |
| aRS1567          | (A) | Collar               | 1           | 2                    | 0                           |
| RS1611           | (V) | Bottom cover         | 1           | 2                    | 0                           |
| RS1612           | (F) | Tripod screw         | 1           | 2                    | 0                           |
| RS1614           | (F) | Plate                | 1           | 2                    | 0                           |
| RS1616           | (C) | Tripod socket        | 1           | 2                    | 0                           |
| RS1621           | (G) | Side plate, left     | 1           | 1                    | 0                           |
| RS1622           | (H) | Side plate, right    | 1           | 2                    | 0                           |
| aRS1631          | (D) | Right panel          | 1           | 2                    | 0                           |
| aRS1632          | (C) | Decorative plate     | 1           | 2                    | 0                           |
| aRS1633          | (C) | Decorative plate     | 1           | 2                    | 0                           |
| aRS1636-1        | (A) | Sheet                | 1           | 2                    | 0                           |
| RS1636-2         | (A) | Sheet                | 2           | 2                    | 0                           |
| aRS1641          | (C) | Side plate, left     | 1           | 1                    | 0                           |
| aRS1642          | (C) | Decorative plate     | 1           | 1                    | 0                           |
| aRS1643          | (B) | Decorative plate     | 1           | 1                    | 0                           |
| aRS1646          | (B) | Distance scale       | 1           | 1                    | 0                           |
| aRS1651K2        | (A) | Slide plate, right   | 1           | 3                    | 0                           |
| RS1652K2         | (B) | Slide plate, left    | 1           | 3                    | 0                           |

| Parts No. |     | Description          | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|----------------------|------|--------------|--------------------|
| aRS1654   | (B) | Slide cover, right   | 1    | 3            | 0                  |
| RS1655    | (E) | Slide cover, left    | 1    | 3            | 0                  |
| RS1661K2  | (A) | Slide coupling plate | 1    | 3            | 0                  |
| RS1663    | (B) | Shaft                | 1    | 3            | 0                  |
| N2.6N13   |     | Nut                  | 1    | 3            | 0                  |
| RS1671    | (B) | Lever                | 1    | 3            | 0                  |
| RS1672    | (B) | Shoulder screw       | 1    | 3            | 0                  |
| RS1673    | (C) | Cover plate          | 1    | 3            | 0                  |
| aRS1911   | (B) | Leatherette          | 1    | 2            | 0                  |
| aRS1913   | (C) | Leatherette          | 1    | 2            | 0                  |
| RS1914    | (A) | Leatherette          | 1    | 1            | 0                  |
| RS1913    | (B) | Leatherette          | 1    | 1            | 0                  |
| aRS1921-1 | (B) | Leatherette          | 1    | 1            | 0                  |
| RS1921-2  | (I) | Leatherette          | 1    | 1            | 0                  |
| RS1922    | (G) | Leatherette          | 1    | 1            | 0                  |
| RS1923    | (F) | Leatherette          | 1    | 1            | 0                  |
| aRS1924   | (A) | Leatherette          | 2    | 5 & 6        | 0                  |
| RS1925    | (F) | Leatherette          | 1    | 4            | 0                  |
| RS1928    | (D) | Leatherette          | 1    | 1            | 0                  |
| RS2111    | (L) | Front panel          | 1    | 5            | *                  |
| RS2112    | (C) | Sealing sponge       | 1    | 5            | 0                  |
| RS2113K2  | (C) | Stopper plate        | 1    | 4            | 0                  |
| RS2116    | (A) | Spring               | 1    | 4            | 0                  |
| RS2117    | (B) | Anchor               | 1    | 4            | 0                  |
| RS2121K2  | (N) | Bayonet              | 1    | 4            | *                  |
| RS2123K2  | (F) | Lock lever           | 1    | 4            | 0                  |
| RS2125    | (C) | Shaft                | 1    | 4            | 0                  |
| RS2126    | (D) | Spring               | 1    | 4            | 0                  |
| RS2131    | (H) | Mounting ring        | 1    | 5            | 0                  |
| RS2133    | (G) | Cocking ring         | 1    | 4            | 0                  |
| RS2135    | (A) | Spacer               | 12   | 4            | 0                  |
| RS2136    | (H) | Retaining plate      | 1    | 4            | 0                  |
| RS2137    | (H) | Shoulder screw       | 1    | 4            | 0                  |
| RS2139    | (E) | Retaining ring       | 1    | 4            | 0                  |
| RS2141K2  | (E) | Cocking shaft        | 1    | 4            | 0                  |
| CSN1318   |     | Washer               | 1    | 4            | 0                  |

| Parts No. |     | Description               | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|---------------------------|------|--------------|--------------------|
| RS2144    | (C) | Catch plate               | 1    | 4            | 0                  |
| RS2151    | (A) | Front cover               | 1    | 1            | 0                  |
| RS2153    | (B) | Red bead                  | 1    | 1            | 0                  |
| RS2155    | (B) | Cover plate               | 1    | 1            | 0                  |
| aRS2156   | (B) | Name plate                | 1    | 1            | 0                  |
| RS2161    | (C) | Hole plate                | 1    | 2            | 0                  |
| RS2411    | (D) | Mirror                    | 1    | 6            | 0                  |
| aRS2412K2 | (E) | Mirror holder             | 1    | 12           | 0                  |
| RS2413    | (D) | Holder, upper             | 1    | 6            | 0                  |
| RS2414    | (C) | Holder, lower             | 1    | 12           | 0                  |
| RS2416-2  | (A) | Nut                       | 1    | 11           | 0                  |
| RS2418    | (B) | Paper                     | 1    | 6            | 0                  |
| RS2421    | (A) | Shaft                     | 1    | 12           | 0                  |
| RS2422    | (B) | Spring                    | 2    | 12           | 0                  |
| RS2423    | (B) | Collar                    | 1    | 12           | 0                  |
| RS2426    | (E) | Cushion                   | 2    | 6            | 0                  |
| RS2427    | (A) | Collar                    | 1    | 12           | 0                  |
| RS2429    | (A) | Cushion                   | 1    | 6            | 0                  |
| RS2431K2  | (L) | Light baffle plate        | 1    | 12           | 0                  |
| aRS2437   | (C) | Reflection absorber paper | 1    | 12           | 0                  |
| RS2441    | (B) | Curtain                   | 1    | 12           | 0                  |
| RS2442    | (G) | Cushion                   | 1    | 12           | 0                  |
| RS2443K2  | (D) | Stop lever                | 1    | 12           | 0                  |
| RS2451K2  | (I) | Mirror raising lever      | 1    | 11           | 0                  |
| RS2457    | (C) | Spring                    | 1    | 11           | 0                  |
| RS2461    | (H) | Gear                      | 1    | 11           | 0                  |
| RS2462    | (G) | Bushing                   | 1    | 11           | 0                  |
| RS2465    | (D) | Spring                    | 1    | 11           | 0                  |
| RS2466    | (D) | Spring                    | 1    | 11           | 0                  |
| RS2467    | (B) | Anchor                    | 2    | 11           | 0                  |
| RS2468    | (C) | Screw                     | 1    | 11           | 0                  |
| RS2471    | (B) | Angle pin                 | 2    | 13           | 0                  |
| RS2472    | (A) | Screw                     | 2    | 13           | 0                  |
| RS2475K2  | (E) | Light baffle plate lever  | 1    | 11           | 0                  |
| RS2477    | (C) | Collar                    | 1    | 11           | 0                  |



| Parts No. |     | Description           | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|-----------------------|------|--------------|--------------------|
| RS2478    | (D) | Shoulder screw        | 1    | 11           | 0                  |
| RS2479    | (C) | Spring                | 1    | 11           | 0                  |
| RS2481K2  | (E) | Hang lever            | 1    | 11           | 0                  |
| RS2483    | (D) | Shaft                 | 1    | 11           | 0                  |
| RS2484    | (D) | Spring                | 1    | 11           | 0                  |
| RS2486    | (D) | Collar                | 1    | 11           | 0                  |
| RS2511K2  | (E) | Signal cam            | 1    | 11           | 0                  |
| RS2514    | (C) | Shaft                 | 1    | 11           | 0                  |
| RS2515    | (B) | Screw                 | 1    | 11           | 0                  |
| RS2516    | (B) | Anchor                | 1    | 11           | 0                  |
| RS2517    | (A) | Spring                | 1    | 11           | 0                  |
| RS2519    | (D) | Spring                | 1    | 11           | 0                  |
| RS2521K2  | (C) | Signal lever          | 1    | 11           | 0                  |
| RS2524    | (B) | Collar                | 1    | 11           | 0                  |
| RS2527    | (C) | Shaft                 | 1    | 11           | 0                  |
| RS2528    | (D) | Spring                | 1    | 11           | 0                  |
| RS2529    | (B) | Anchor                | 1    | 11           | 0                  |
| RS2531    | (C) | Coupling arm, right   | 1    | 11           | 0                  |
| aRS2532   | (B) | Coupling arm, left    | 1    | 7            | 0                  |
| RS2533    | (B) | Coupling rod          | 1    | 7            | 0                  |
| RS2534    | (B) | Bracket               | 1    | 7            | 0                  |
| RS2535    | (C) | Stopper               | 1    | 7            | 0                  |
| RS2536    | (C) | Guide                 | 2    | 13           | 0                  |
| RS2537    | (B) | Catch plate           | 1    | 7            | 0                  |
| RS2551    | (H) | Gear                  | 2    | 11           | 0                  |
| RS2552    | (E) | Hub                   | 2    | 11           | 0                  |
| RS2554    | (A) | Screw                 | 2    | 11           | 0                  |
| RS2560    | (B) | Governor              | 1    | 12           | 0                  |
| RS2567    | (D) | Screw                 | 3    | 12           | 0                  |
| RS2611K   | (L) | Focusing screen frame | 1    | 6            | *                  |
| aRS2612   | (B) | Screen glass          | 1    | 6            | 0                  |
| RS2613    | (E) | Fresnel lens          | 1    | 6            | 0                  |
| RS2614    | (B) | Spring plate          | 2    | 6            | 0                  |
| RS2615    | (A) | Screw                 | 8    | 6            | 0                  |
| RS2617    | (D) | Leaf spring           | 2    | 6            | 0                  |

| Parts No.   |     | Description             | Pcs.  | Ref.<br>Page | Term<br>of<br>Sale |
|-------------|-----|-------------------------|-------|--------------|--------------------|
| RS2621      | (E) | Click                   | 2     | 13           | 0                  |
| RS2623      | (D) | Adjusting screw         | 4     | 8            | 0                  |
| RS2624      | (B) | Adjusting spring        | 2     | 8            | 0                  |
| RS2631      | (B) | F H lock pin            | 2     | 13           | 0                  |
| RS2634      | (B) | Cushion                 | 2     | 6            | 0                  |
| RS7149      | (A) | Washer                  | 1 - 2 | 6            | 0                  |
| aRS3118     | (B) | Plate                   | 1     | 8            | 0                  |
| aRS3122K2   | (E) | Red bare changing lever | 1     | 8            | 0                  |
| aRS3123     | (E) | Spring                  | 2     | 8 & 9        | 0                  |
| aRS3124     | (D) | Shoulder screw          | 1     | 8            | 0                  |
| aRS3127     | (D) | Retaining spring        | 2     | 8            | 0                  |
| aRS3129     | (A) | Shoulder screw          | 1     | 8            | 0                  |
| aRS3131K2-1 | (C) | Marking lever, right    | 1     | 8            | 0                  |
| aRS3131K2-2 | (C) | Marking lever, left     | 1     | 8            | 0                  |
| aRS3143     | (B) | Stopper                 | 1     | 8            | 0                  |
| aRS3161     | (B) | Spring                  | 1     | 7            | 0                  |
| aRS3162     | (E) | Anchor                  | 1     | 8            | 0                  |
| aRS3164     | (D) | Anchor                  | 1     | 10           | 0                  |
| aRS3168     | (B) | No. 1 lever             | 1     | 7            | 0                  |
| aRS3169     | (D) | Shoulder screw          | 1     | 7            | 0                  |
| aRS3171K2   | (A) | Sub lever               | 1     | 7            | 0                  |
| aRS3172     | (D) | Spring                  | 1     | 7            | 0                  |
| aRS3175     | (C) | Spring                  | 1     | 7            | 0                  |
| aRS3176     | (B) | Coupling plate          | 1     | 7            | 0                  |
| aRS3177     | (A) | Shaft                   | 1     | 7            | 0                  |
| aRS3178     | (B) | Nut                     | 1     | 7            | 0                  |
| aRS3179     | (B) | Spring                  | 1     | 7            | 0                  |
| aRS3181     | (A) | No. 2 lever             | 1     | 7            | 0                  |
| aRS3182     | (D) | Shoulder screw          | 1     | 7            | 0                  |
| aRS3183K2   | (C) | No. 3 lever             | 1     | 8            | 0                  |
| aRS3185     | (C) | Shaft                   | 1     | 8            | 0                  |
| aRS3186     | (B) | Spring                  | 1     | 8            | 0                  |
| aRS3187     | (C) | Anchor                  | 1     | 8            | 0                  |
| aRS3188     | (A) | Setting spring          | 1     | 7            | 0                  |
| aRS3189-1   | (A) | Stopper                 | 1     | 7            | 0                  |

Focusing Hood (aRS2700)

| Parts No. |     | Description        | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|--------------------|------|--------------|--------------------|
| aRS2711   | (E) | FH base frame      | 1    | 14           | 0                  |
| aRS2712   | (C) | Spring             | 1    | 14           | 0                  |
| aRS2713   | (A) | Plate              | 1    | 14           | 0                  |
| aRS2715   | (D) | Stopping plate     | 1    | 14           | 0                  |
| aRS2717K2 | (B) | Hinge plate        | 1    | 14           | 0                  |
| aRS2721   | (A) | Shaft              | 1    | 14           | 0                  |
| aRS2722K  | (C) | Rear panel         | 1    | 14           | 0                  |
| aRS2725   | (B) | Light baffle plate | 2    | 14           | 0                  |
| aRS2726   | (A) | Hinge              | 2    | 14           | 0                  |
| aRS2728   | (A) | Shaft              | 2    | 14           | 0                  |
| aRS2729   | (A) | Spring             | 2    | 14           | 0                  |
| aRS2731   | (E) | Hinge plate, right | 1    | 14           | 0                  |
| aRS2732K2 | (E) | Hinge plate, left  | 1    | 14           | 0                  |
| aRS2733   | (B) | Stopper            | 1    | 14           | 0                  |
| aRS2738   | (C) | Shaft              | 2    | 14           | 0                  |
| aRS2739   | (B) | Shaft              | 2    | 14           | 0                  |
| aRS2741   | (D) | Side panel, right  | 1    | 14           | 0                  |
| aRS2742   | (D) | Side panel, left   | 1    | 14           | 0                  |
| aRS2743   | (C) | Side panel, right  | 1    | 14           | 0                  |
| aRS2744   | (C) | Side panel, left   | 1    | 14           | 0                  |
| aRS2745   | (B) | Shaft              | 4    | 14           | 0                  |
| aRS2746   | (A) | Spring             | 2    | 14           | 0                  |
| aRS2749   | (A) | Cushion            | 2    | 14           | 0                  |
| aRS2751K2 | (D) | Magnifier frame    | 1    | 14           | 0                  |
| aRS2754   | (A) | Hinge plate        | 1    | 14           | 0                  |
| aRS2756   | (B) | Shaft              | 1    | 14           | 0                  |
| aRS2757   | (A) | Spring             | 2    | 14           | 0                  |
| aRS2758K  | (B) | Magnifier          | 1    | 14           | *                  |
| aRS2761   | (C) | Hood cover         | 1    | 14           | 0                  |
| RS2736    | (D) | Mamiya mark        | 1    | 14           | 0                  |
| aRS2764   | (A) | Hinge plate        | 1    | 14           | 0                  |
| aRS2765   | (A) | Plate              | 1    | 14           | 0                  |

| Parts No. |     | Description   | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------|-----|---------------|------|--------------|--------------------|
| aRS2767   | (D) | Panel         | 1    | 14           | 0                  |
| aRS2768   | (A) | Washer        | 2    | 14           | 0                  |
| aRS2771   | (B) | Shaft         | 1    | 14           | 0                  |
| aRS2772   | (A) | Shaft         | 1    | 14           | 0                  |
| aRS2774   | (A) | Frame         | 1    | 14           | 0                  |
| aRS2775   | (B) | Name plate    | 1    | 14           | 0                  |
| RS2733    | (H) | Latch plate   | 1    | 14           | 0                  |
| aRS2777   | (A) | Leaf spring   | 1    | 14           | 0                  |
| aRS2778   | (B) | Guide screw   | 2    | 14           | 0                  |
| aRS2779   | (C) | Lock plate    | 1    | 14           | 0                  |
| aRS2781   | (A) | Sealing plate | 4    | 14           | 0                  |
| aRS2782   | (B) | Sealing plate | 2    | 14           | 0                  |
| aRS2783   | (A) | Leatherette   | 1    | 14           | 0                  |
| aRS2784   | (B) | Leatherette   | 1    | 14           | 0                  |
| aRS2785   | (A) | Leatherette   | 1    | 14           | 0                  |
| aRS2786   | (B) | Cushion       | 2    | 14           | 0                  |
| RS2714    | (A) | Velveteen     | 4    | 14           | 0                  |
| aRS2789   | (C) | Cushion       | 2    | 14           | 0                  |

| Parts No.       | Description   | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------------|---|------|--------------|--------------------|
| (3)PB1.7x2.2BNi | Screw for 2717K2  | 2    | 14           | 0                  |
| (3)PB1.7x3.5BNi | Screw for 1526, 1527, 1534                                  | 8    | 5, 6         | 0                  |
| PD1.4x2BNi      | Screw for 2726  | 4    | 14           | 0                  |
| PD1.4x2.5BNi    | Screw for 1131, 1329, 1673                                  | 7    | 2, 3         | 0                  |
| PD1.7x1.8BNi    | Screw for 1534  | 4    | 5            | 0                  |
| PD1.7x2BNi      | Screw for 1151, 1416, 1547,<br>1631, 1641, 2131             | 19   | 1,2,5,9,13   | 0                  |
| PD1.7x2.5BNi    | Screw for 1621, 1622, 2151,<br>2161, 2552, 2713, 2715, 2764 | 25   | 1,2,11,14    | 0                  |
| PD1.7x3BNi      | Screw 1227, 1228, 1654, 1655,<br>1673, 2462, 2537           | 16   | 3,7,11,15    | 0                  |
| PD1.7x3.5BNi    | Screw for 1565, 1541, 1542                                  | 3    | 2,4          | 0                  |
| PD1.7x4BNi      | Screw for 1227, 1228  | 2    | 15           | 0                  |
| PD1.7x4.5BNi    | Screw for 1481  | 2    | 6            | 0                  |
| PD1.7x5.5BNi    | Screw for 1513, 1565  | 3    | 2, 5, 6      | 0                  |
| PD2x2BNi        | Screw for 1263  | 2    | 15           | 0                  |
| PD2x3.5BNi      | Screw for 1213, 1214, 1215,<br>1218, 1561                   | 9    | 2, 16        | 0                  |
| PD2x5BNi        | Screw for 1171, 1312K2, 1561                                | 14   | 1, 2, 4      | 0                  |
| PD2.6x4.5BNi    | Screw for 1531, 1532, 1541,<br>1542                         | 12   | 5            | 0                  |
| PD2.6x4.5Cr3    | Screw for 1614, 2121  | 9    | 2, 4         | 0                  |
| PD2.6x6BNi      | Screw for 1611  | 4    | 2            | 0                  |
| 3PD1.7x2.5BNi   | Screw for 2717K2  | 2    | 14           | 0                  |
| AS1.4x2         | Screw for Focusing hood                                     | 8    | 14           | 0                  |
| 4W2x0.2         | Washer for 1661   | 2    | 3            | 0                  |
| 5W2.5x0.2       | Washer for 2511   | 1    | 12           | 0                  |
| 6W3x0.1         | Washer for 1441K2   | 2    | 9            | 0                  |
| E-10            | E ring for 2521K2   | 1    | 11           | 0                  |
| E-13            | E ring for 2412, 2481                                       | 3    | 11, 12       | 0                  |
| E-64            | E ring for 1375K2, 1374K2                                   | 2    | 10           | 0                  |
| PB1.4x1.3BNi    | Screw for 1646, 2413  | 4    | 1, 6         | 0                  |
| PB1.4x1.5BNi    | Screw for 2414  | 2    | 12           | 0                  |

| <i>Parts No.</i> | <i>Description</i>  | <i>Pcs.</i> | <i>Ref.<br/>Page</i> | <i>Term<br/>of<br/>Sale</i> |
|------------------|---|-------------|----------------------|-----------------------------|
| PB1.4x2BNI       | Screw for Focusing hood   | 8           | 14                   | 0                           |
| PB1.7x1.5BNI     | Screw for 1551K   | 2           | 5                    | 0                           |
| PB1.7x1.5Cr3     | Screw for 2621  | 4           | 13                   | 0                           |
| PB1.7x1.6BNI     | Screw for 3131K2  | 2           | 8                    | 0                           |
| PB1.7x1.8BNI     | Screw for 1551K   | 5           | 5                    | 0                           |
| PB1.7x2BNI       | Screw for 1133, 1134, 1141K2, 25<br>1143, 1236, 1238, 1363K2,<br>1483, 2443K2, 2624, 2711 | 25          | 2 - 16               | 0                           |
| PB1.7x2.5BNI     | Screw for 2534  | 2           | 7                    | 0                           |
| PB1.7x3BNI       | Screw for 1551, 2144  | 6           | 4, 5                 | 0                           |
| PB1.7x4BNI       | Screw for 1351, 1473  | 4           | 7, 11                | 0                           |
| PB2x3.5BNI       | Screw for 1375  | 1           | 10                   | 0                           |
| 3PB1.4x1.4BNI    | Screw for 1651, 1652  | 2           | 3                    | 0                           |
| 3PB1.4x1.6BNI    | Screw for 1141K2  | 2           | 8                    | 0                           |
| 3PB1.7x2BNI      | Screw for 1416, 3118, 2741,<br>3189-1, 3118   | 11          | 7, 8, 9              | 0                           |
| 3PB1.7x2.5BNI    | Screw for 1466, 2451, 2741,<br>2754   | 11          | 9, 11, 14            | 0                           |
| 3PB1.7x3.5BNI    | Screw for 1245, 1331K   | 6           | 10, 15               | 0                           |
| 3PB2x2.8BNI      | Screw for 1321K2  | 1           | 10                   | 0                           |
| 3PB2.6x4.5BNI    | Screw for 1654, 1655  | 4           | 3                    | 0                           |

# Breakdown List for Special Assembly

| Parts No.        |     | Description              | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------------|-----|--------------------------|------|--------------|--------------------|
| <u>aRS1141K2</u> | (C) | Frame for red bare assy. | 1    | 8            | 0                  |
| -aRS1141         | (C) | Frame                    | 1    | -            | x                  |
| -RS1145          | (D) | Sealing sponge           | 1    | -            | 0                  |
| -aRS3111         | (B) | Red bare                 | 2    | -            | 0                  |
| -2.8W1.4x3       |     | Washer                   | 4    | -            | x                  |
| -aRS3114         | (C) | Arm                      | 1    | -            | x                  |
| -aRS3115         | (C) | Arm                      | 1    | -            | x                  |
| -aRS3116         | (C) | Hub                      | 2    | -            | x                  |
| -aRS3117         | (C) | Shaft                    | 2    | -            | x                  |
| -aRS3121         | (B) | Stopper                  | 4    | -            | x                  |
| <u>aRS1221K2</u> | (B) | Lock lever - A           | 1    | 15           | 0                  |
| -aRS1221         | (B) | Lock lever               | 1    | -            | x                  |
| -aRS1223         | (A) | Hub                      | 1    | -            | x                  |
| -aRS3155         | (A) | Pin                      | 1    | -            | x                  |
| -aRS3156         | (A) | Boss                     | 1    | -            | x                  |
| <u>aRS1222K2</u> | (B) | Lock lever - B           | 1    | 15           | 0                  |
| -aRS1222         | (B) | Lock lever               | 1    | -            | x                  |
| -aRS1223         | (A) | Hub                      | 1    | -            | x                  |
| -aRS3155         | (A) | Pin                      | 1    | -            | x                  |
| -aRS3156         | (A) | Boss                     | 1    | -            | x                  |
| <u>aRS1227K2</u> | (A) | Cover plate - A          | 1    | 15           | 0                  |
| -aRS1227         | (A) | Plate                    | 1    | -            | x                  |
| -aRS1233         | (A) | Boss                     | 1    | -            | x                  |
| <u>aRS1228K2</u> | (A) | Cover plate - B          | 1    | 15           | 0                  |
| -aRS1228         | (B) | Plate                    | 1    | -            | x                  |
| -aRS1233         | (A) | Boss                     | 1    | -            | x                  |
| <u>aRS1231K2</u> | (A) | Release lock lever - A   | 1    | 15           | 0                  |
| -aRS1231         | (A) | Lever                    | 1    | -            | x                  |
| -aRS3157         | (C) | Pin                      | 1    | -            | x                  |
| -aRS3158         | (B) | Collar                   | 1    | -            | x                  |

| Parts No.        |     | Description            | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------------|-----|------------------------|------|--------------|--------------------|
| <u>aRS1232K2</u> | (A) | Release lock lever - B | 1    | 15           | 0                  |
| - aRS1232        | (A) | Lever                  | 1    | -            | x                  |
| - aRS3159        | (C) | Pin                    | 1    | -            | x                  |
| <u>RS1271K2</u>  | (B) | Coupling pin assy.     | 1    | 15           | 0                  |
| - RS1271         | (B) | S. adapter             | 1    | -            | x                  |
| - RS1272         | (D) | Sleeve                 | 1    | -            | x                  |
| - RS1273         | (A) | Rod                    | 1    | -            | x                  |
| - RS1274         | (B) | Guide                  | 1    | -            | x                  |
| - RS1275         | (B) | Screw                  | 1    | -            | x                  |
| - RS1276         | (B) | Spring                 | 1    | -            | x                  |
| <u>aRS1312K2</u> | (N) | Cocking lever shaft    | 1    | 10           | 0                  |
| - RS1312         | (N) | Shaft                  | 1    | -            | x                  |
| - RS1313         | (G) | Hub                    | 1    | -            | x                  |
| - RS1318         | (E) | Knok pin               | 2    | -            | x                  |
| - aRS1316        | (B) | Angle gear             | 1    | -            | x                  |
| <u>aRS1321K2</u> | (G) | Cocking base plate     | 1    | 10           | 0                  |
| - RS1321         | (G) | Base plate             | 1    | -            | x                  |
| - RS1322         | (C) | Hub                    | 2    | -            | x                  |
| - RS1323         | (D) | Collar                 | 2    | -            | x                  |
| - RS1324         | (E) | Pawl                   | 2    | -            | x                  |
| - RS1338         | (A) | Anchor                 | 1    | -            | x                  |
| - aRS3163        | (B) | Pawl                   | 1    | -            | x                  |
| <u>RS1357K2</u>  | (G) | Cocking gear           | 1    | 11           | 0                  |
| - RS1357         | (G) | Gear                   | 1    | -            | x                  |
| - RS1358         | (D) | Pin                    | 1    | -            | x                  |
| <u>RS1374K2</u>  | (D) | Bevel gear             | 1    | 10           | 0                  |
| - RS1371         | (D) | Gear                   | 1    | 10           | 0                  |
| - RS1374         | (B) | Base                   | 1    | 10           | 0                  |
| - E-64           |     | E ring                 | 1    | 10           | 0                  |
| <u>RS1375K2</u>  | (D) | Bevel gear             | 1    | 10           | 0                  |
| - RS1362K2       | (F) | Bevel gear             | 1    | 10           | 0                  |



| Parts No.       |     | Description          | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-----------------|-----|----------------------|------|--------------|--------------------|
| RS1362          | (S) | Shaft                | 1    | -            | x                  |
| RS1371          | (D) | Gear                 | 1    | -            | x                  |
| RS1368          | (B) | Screw                | 1    | -            | x                  |
| RS1375          | (C) | Base                 | 1    | 10           | 0                  |
| RS1381          | (C) | Spring               | 1    | 10           | 0                  |
| E-64            |     | E ring               | 1    | 10           | 0                  |
| <u>RS1421K2</u> | (D) | Stop lever           | 1    | 9            | 0                  |
| RS1421          | (D) | Lever                | 1    | -            | x                  |
| RS1422          | (B) | Pin                  | 1    | -            | x                  |
| <u>RS1431K2</u> | (D) | Release lever        | 1    | 9            | 0                  |
| RS1431          | (D) | Lever                | 1    | -            | x                  |
| RS1432          | (C) | Hub                  | 1    | -            | x                  |
| <u>RS1441K2</u> | (A) | Upper release lever  | 1    | 9            | 0                  |
| RS1441          | (A) | Lever                | 1    | -            | x                  |
| RS1442          | (B) | Hub                  | 1    | -            | x                  |
| <u>RS1443K2</u> | (A) | Lower release lever  | 1    | 9            | 0                  |
| RS1443          | (A) | Lever                | 1    | -            | x                  |
| RS1444          | (B) | Hub                  | 1    | -            | x                  |
| <u>RS1651K2</u> | (A) | Slide plate, right   | 1    | 3            | 0                  |
| RS1651          | (A) | Slide                | 1    | -            | x                  |
| RS1653          | (B) | Pin                  | 1    | -            | x                  |
| <u>RS1652K2</u> | (B) | Slide plate, left    | 1    | 3            | 0                  |
| RS1652          | (B) | Slide                | 1    | -            | x                  |
| RS1653          | (B) | Pin                  | 1    | -            | x                  |
| <u>RS1661K2</u> | (A) | Slide coupling plate | 1    | 3            | 0                  |
| RS1661          | (A) | Plate                | 1    | -            | x                  |
| RS1662          | (A) | Boss                 | 1    | -            | x                  |
| <u>RS2113K2</u> | (C) | Stopper plate assy.  | 1    | 4            | 0                  |
| RS2113          | (C) | Stopper plate        | 1    | -            | x                  |
| RS2115          | (B) | Boss                 | 1    | -            | x                  |

| Parts No.        |     | Description          | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------------|-----|----------------------|------|--------------|--------------------|
| <u>RS2121K2</u>  | (N) | Bayonet              | 1    | 4            | *                  |
| - RS2121         | (N) | Bayonet              | 1    | -            | x                  |
| - RS2127         | (A) | Angle                | 1    | -            | x                  |
| - PD1.4x1.8cr3   |     | Screw                | 2    | -            | x                  |
| <u>RS2123K2</u>  | (F) | Lock lever           | 1    | 4            | 0                  |
| - RS2123         | (F) | Lever                | 1    | -            | x                  |
| - RS2124         | (B) | Hub                  | 1    | -            | x                  |
| <u>RS2141K2</u>  | (E) | Cocking shaft        | 1    | 4            | 0                  |
| - RS2141         | (E) | Cocking gear         | 1    | -            | x                  |
| - RS2142         | (D) | Knok pin             | 1    | -            | x                  |
| - RS2147         | (D) | Shaft                | 1    | -            | x                  |
| <u>aRS2412K2</u> | (E) | Mirror holder        | 1    | 12           | 0                  |
| - aRS2412        | (E) | Holder               | 1    | -            | x                  |
| - RS2415K        | (E) | Arm                  | 1    | -            | x                  |
| - RS2417         | (B) | Rivet                | 1    | -            | x                  |
| - aRS2425        | (A) | Rivet                | 2    | -            | x                  |
| <u>RS2431K2</u>  | (L) | Light baffle plate   | 1    | 12           | 0                  |
| - RS2431K        | (L) | Plate                | 1    | -            | x                  |
| - RS2433-2       | (B) | Plate                | 1    | -            | x                  |
| - RS2435         | (A) | Hub                  | 2    | -            | x                  |
| - RS2436K        | (E) | Arm                  | 1    | -            | x                  |
| - RS2439         | (C) | Rivet                | 2    | -            | x                  |
| <u>RS2443K2</u>  | (D) | Stop lever           | 1    | 12           | 0                  |
| - RS2443         | (D) | Angle                | 1    | -            | x                  |
| - RS2444         | (D) | Lever                | 1    | -            | x                  |
| - RS2445         | (C) | Screw                | 1    | -            | x                  |
| - RS2446         | (B) | Spring               | 1    | -            | x                  |
| - 4W2x0.1        |     | Washer               | 1    | -            | x                  |
| <u>RS2451K2</u>  | (I) | Mirror raising lever | 1    | 11           | 0                  |
| - RS2451         | (I) | Lever                | 1    | -            | x                  |
| - RS2452         | (C) | Anchor               | 4    | -            | x                  |

| Parts No.        |     | Description              | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------------|-----|--------------------------|------|--------------|--------------------|
| RS2455           | (B) | Collar                   | 1    | -            | x                  |
| RS2456           | (C) | Shaft                    | 1    | -            | x                  |
| <u>RS2475K2</u>  | (E) | Light baffle plate lever | 1    | 11           | 0                  |
| RS2475           | (E) | Lever                    | 1    | -            | x                  |
| RS2476           | (B) | Shaft                    | 1    | -            | x                  |
| <u>RS2481K2</u>  | (E) | Hang lever               | 1    | 11           | 0                  |
| RS2481           | (E) | Lever                    | 1    | -            | x                  |
| RS2482           | (D) | Hub                      | 1    | -            | x                  |
| RS2487           | (E) | Shaft                    | 1    | -            | x                  |
| <u>RS2511K2</u>  | (E) | Signal cam               | 1    | 11           | 0                  |
| RS2511           | (E) | Cam                      | 1    | -            | x                  |
| RS2512           | (C) | Anchor                   | 1    | -            | x                  |
| RS2513           | (C) | Hub                      | 1    | -            | x                  |
| <u>RS2521K2</u>  | (C) | Signal lever             | 1    | 11           | 0                  |
| RS2521           | (C) | Lever                    | 1    | -            | x                  |
| RS2522           | (B) | Hub                      | 1    | -            | x                  |
| RS2523           | (D) | Bush                     | 1    | -            | x                  |
| RS2525           | (C) | Shaft                    | 1    | -            | x                  |
| <u>aRS2717K2</u> | (B) | Hinge plate              | 1    | 14           | 0                  |
| aRS2717          | (B) | Plate                    | 1    | -            | x                  |
| aRS2718          | (B) | Spring holder            | 2    | -            | x                  |
| aRS2788          | (B) | Pulley                   | 2    | -            | x                  |
| <u>aRS2732K2</u> | (E) | Hinge plate, left        | 1    | 14           | 0                  |
| aRS2732          | (E) | Plate                    | 1    | -            | x                  |
| aRS2733          | (E) | Stopper                  | 1    | -            | x                  |
| aRS2734          | (D) | Spring                   | 1    | -            | x                  |
| Rml.7            |     | Rivet                    | 2    | -            | x                  |
| aRS2736-1        | (C) | Lever                    | 1    | -            | x                  |
| aRS2736-2        | (B) | Knob                     | 1    | -            | 0                  |
| aRS2737          | (A) | Rivet                    | 1    | -            | x                  |

| Parts No.        |     | Description            | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------------|-----|------------------------|------|--------------|--------------------|
| <u>aRS2751K2</u> | (D) | Magnifier Frame        | 1    | 14           | 0                  |
| -aRS2751         | (D) | Frame                  | 1    | -            | x                  |
| -aRS2752         | (B) | Retaining ring         | 1    | -            | x                  |
| - Pm-1           |     | Rivet                  | 4    | -            | x                  |
| <u>aRS3122K2</u> | (E) | Red bar changing lever | 1    | 8            | 0                  |
| -aRS3122         | (E) | 1st lever              | 1    | -            | x                  |
| -aRS3125         | (B) | 2nd lever, right       | 1    | -            | x                  |
| -aRS3126         | (D) | 2nd lever, left        | 1    | -            | x                  |
| -aRS3128         | (D) | Hub                    | 1    | -            | x                  |
| -aRS3135         | (A) | Lever                  | 1    | -            | x                  |
| -aRS3136         | (B) | Hub                    | 1    | -            | x                  |
| -aRS3137         | (B) | Hub                    | 1    | -            | x                  |
| <u>aRS3131K2</u> | (C) | Marking lever          | 1    | 8            | 0                  |
| -aRS3131         | (C) | 3rd lever              | 1    | -            | x                  |
| -aRS3132         | (C) | Pin                    | 1    | -            | x                  |
| -aRS3133         | (D) | Hub                    | 1    | -            | x                  |
| <u>aRS3171K2</u> | (A) | Sub lever              | 1    | 7            | 0                  |
| -aRS3171         | (A) | Lever                  | 1    | -            | x                  |
| -aRS3173         | (A) | Stop lever             | 1    | -            | x                  |
| -aRS3174         | (C) | Rivet                  | 1    | -            | x                  |
| <u>aRS3183K2</u> | (C) | No. 3 lever            | 1    | 8            | 0                  |
| -aRS3183         | (C) | Lever                  | 1    | -            | x                  |
| -aRS3128         | (A) | Hub                    | 1    | -            | x                  |

**120 Roll Film Holder**  
**for Mamiya RB67 ProS (aRSH6000)**

| <b>Parts No.</b> |     | <b>Description</b> | <b>Pcs.</b> | <b>Ref.<br/>Page</b> | <b>Term<br/>of<br/>Sale</b> |
|------------------|-----|--------------------|-------------|----------------------|-----------------------------|
| aRSH6111K2       | (C) | Film holder frame  | 1           | 21                   | *                           |
| aRSH6116         | (D) | Film roller        | 2           | 21                   | 0                           |
| aRSH6117         | (D) | Collar             | 4           | 21                   | 0                           |
| aRSH6118         | (D) | Spring             | 4           | 21                   | 0                           |
| aRSH6121K2       | (A) | Latch              | 1           | 21                   | 0                           |
| aRSH6123         | (A) | Guide              | 2           | 21                   | 0                           |
| RSH6126K2        | (D) | Latch cover        | 1           | 21                   | 0                           |
| RHL1116          | (A) | Spring             | 1           | 21                   | 0                           |
| aRSH6132         | (A) | Plate              | 1           | 21                   | 0                           |
| aRSH6134         | (A) | Lock lever         | 1           | 21                   | 0                           |
| RSH6136          | (D) | Lock lever cover   | 1           | 21                   | 0                           |
| RSH6138          | (A) | Leatherette        | 1           | 21                   | 0                           |
| aRSH6211K2       | (A) | Back lid           | 1           | 21                   | *                           |
| RSH6212          | (B) | Hinge              | 1           | 21                   | 0                           |
| RSH6214          | (A) | Shaft              | 1           | 21                   | 0                           |
| aRS2156          | (B) | Name plate         | 1           | 21                   | 0                           |
| RSH6227          | (A) | Light baffle       | 1           | 21                   | 0                           |
| RSH6228          | (B) | Light baffle       | 1           | 21                   | 0                           |
| aRSH6229         | (D) | Sealing strip      | 2           | 21                   | 0                           |
| aRSH6311K2       | (C) | Plate holder       | 1           | 20                   | 0                           |
| aRSH6315K2       | (A) | Pressure plate     | 1           | 20                   | 0                           |
| RSH6317          | (B) | Screw              | 1           | 20                   | 0                           |
| aRSH6319K        | (B) | T-spring           | 2           | 20                   | 0                           |
| RSH6324          | (E) | Bracket            | 1           | 20                   | 0                           |
| aRSH6326         | (A) | Screw              | 2           | 20                   | 0                           |
| aRSH6327         | (B) | T-spring base      | 1           | 20                   | 0                           |
| aRSH6328         | (A) | Name plate         | 1           | 20                   | 0                           |
| aRSH6331K2       | (E) | Base plate, upper  | 1           | 20                   | *                           |
| aRSH6332         | (C) | Base plate, lower  | 1           | 20                   | 0                           |
| aRSH6333         | (B) | Film guide         | 1           | 20                   | 0                           |
| aRSH6334         | (B) | Film guide         | 1           | 20                   | 0                           |
| aRSH6335         | (A) | Film guide         | 1           | 20                   | 0                           |
| aRSH6336         | (A) | Film guide         | 1           | 20                   | 0                           |

| <i>Parts No.</i> |     | <i>Description</i>  | <i>Pcs.</i> | <i>Ref.<br/>Page</i> | <i>Term<br/>of<br/>Sale</i> |
|------------------|-----|---------------------|-------------|----------------------|-----------------------------|
| aRSH6338-1       | (B) | Light baffle        | 2           | 20                   | 0                           |
| aRSH6338-2       | (B) | Light baffle        | 2           | 20                   | 0                           |
| aRSH6339-1       | (A) | Guide plate         | 2           | 20                   | 0                           |
| aRSH6339-2       | (A) | Guide plate         | 2           | 20                   | 0                           |
| aRSH6341K2       | (C) | Roller              | 1           | 20                   | 0                           |
| aRSH6344K        | (C) | Counter roller      | 1           | 20                   | 0                           |
| aRSH6345         | (C) | Collar              | 1           | 20                   | 0                           |
| aRSH6346         | (B) | Shaft               | 1           | 20                   | 0                           |
| aRSH6347K2       | (B) | Roller              | 1           | 20                   | 0                           |
| RSH6348          | (B) | Shaft               | 1           | 20                   | 0                           |
| aRSH6411K2       | (C) | Base plate          | 1           | 19                   | 0                           |
| RSH6413          | (G) | Winding lever       | 1           | 17                   | 0                           |
| RSH6414          | (C) | Screw               | 1           | 17                   | 0                           |
| RSH6415          | (B) | Disk                | 1           | 17                   | 0                           |
| aRSH6416         | (A) | Shaft               | 1           | 19                   | 0                           |
| aRSH6417         | (C) | Hub                 | 1           | 19                   | 0                           |
| RSH6419K2        | (D) | Disk                | 1           | 17                   | 0                           |
| aRSH6422         | (A) | Spring              | 1           | 19                   | 0                           |
| RSH6423          | (B) | Anchor              | 1           | 19                   | 0                           |
| aRSH6424K2       | (A) | Winding gear, No. 1 | 1           | 19                   | 0                           |
| RSH6425          | (D) | Screw               | 1           | 19                   | 0                           |
| aRSH6426         | (B) | Winding gear, No. 2 | 1           | 19                   | 0                           |
| RSH6427          | (A) | Disk                | 1           | 19                   | 0                           |
| aRSH6428         | (A) | Clutch gear         | 1           | 19                   | 0                           |
| aRSH6431K2       | (C) | Winding stop gear   | 1           | 19                   | 0                           |
| aRSH6435K2       | (C) | Pawl                | 2           | 19                   | 0                           |
| RSH6438          | (A) | Winding gear No. 3  | 1           | 19                   | 0                           |
| RSH6441          | (A) | Film take up spool  | 1           | 19                   | 0                           |
| RSH6442          | (A) | Spring washer       | 1 - 2       | 19                   | 0                           |
| RSH6444          | (A) | Nut                 | 1           | 19                   | 0                           |
| SN8147           |     | Washer for 6444     | 0 - 2       | 19                   | 0                           |
| aRSH6451K2       | (C) | Release lever       | 1           | 19                   | 0                           |
| aRSH6453         | (A) | Spring              | 1           | 19                   | 0                           |
| aRSH6461K2       | (D) | Release plate       | 1           | 19                   | 0                           |
| aRSH6463-1       | (B) | Screw               | 1           | 19                   | 0                           |
| 3N2BNi           |     | Nut                 | 1           | 19                   | 0                           |
| aRSH6464         | (C) | Spring              | 1           | 19                   | 0                           |
| aRSH6467         | (C) | Spring              | 1           | 19                   | 0                           |

| Parts No.  |     | Description             | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------|-----|-------------------------|------|--------------|--------------------|
| aRSH6471   | (B) | First gear              | 1    | 20           | 0                  |
| aRSH6472K2 | (B) | Second gear             | 1    | 20           | 0                  |
| aRSH6473   | (D) | Second small gear       | 1    | 20           | 0                  |
| aRSH6476K2 |     | Third gear              | 1    | 20           | 0                  |
| aRSH6479   | (A) | Screw                   | 1    | 20           | 0                  |
| aRSH6481   | (E) | Spring                  | 1    | 19           | 0                  |
| aRSH6483   | (B) | Base                    | 1    | 18           | 0                  |
| aRSH6484K2 | (C) | Counter dividing device | 1    | 18           | 0                  |
| aRSH6485K2 | (C) | Auxiliary dividing disc | 1    | 18           | 0                  |
| RHL1521    |     | Spring                  | 1    | 18           | 0                  |
| aRSH6491   | (E) | Film counter gear       | 1    | 18           | 0                  |
| aRSH6493   | (D) | Exposure counter plate  | 1    | 18           | 0                  |
| RSH6495    | (C) | Spring                  | 1    | 18           | 0                  |
| RSH6498    | (A) | Screw                   | 1    | 18           | 0                  |
| aRSH6611K2 | (A) | Film spool holder       | 1    | 17           | 0                  |
| aRSH6612   |     | Collar                  | 1    | 17           | 0                  |
| aRSH6615   | (A) | Leaf spring             | 1    | 17           | 0                  |
| aRSH6621K2 | (C) | Top cover               | 1    | 17           | 0                  |
| RSH6624    | (E) | Cover plate             | 1    | 17           | 0                  |
| RSH6627    | (D) | Counter window          | 1    | 17           | 0                  |
| aRSH6629   | (A) | Mask                    | 1    | 17           | 0                  |
| RSH6631    | (D) | Bottom cover            | 1    | 17           | 0                  |
| RSH6634    | (E) | Cover plate             | 1    | 17           | 0                  |
| RSH6636    | (A) | Sealing strip           | 2    | 17           | 0                  |
| RSH6637    | (F) | Discrimination plate    | 1    | 17           | 0                  |
| aRSH6641   | (A) | Film spool holder       | 2    | 17 & 20      | 0                  |
| aRSH6643   | (A) | Collar                  | 1    | 17           | 0                  |
| aRSH6644   | (B) | Shoulder screw          | 1    | 20           | 0                  |
| aRSH6645   | (B) | Shoulder screw          | 1    | 17           | 0                  |
| aRSH6646   | (B) | Spool holder            | 1    | 17           | 0                  |
| aRSH6647   | (C) | Spring washer           | 1    | 17           | 0                  |
| aRSH6648   | (B) | Screw                   | 1    | 17           | 0                  |
| aRSH6711   | (A) | Slide cover             | 1    | 21           | 0                  |
| aRSH6712   | (B) | Handle bar              | 1    | 21           | 0                  |
| RSH6713    | (S) | Fixture                 | 2    | 21           | 0                  |
| RSH6714    | (E) | Rivet                   | 2    | 21           | 0                  |
| RSH6716    | (B) | Plate                   | 2    | 21           | 0                  |

| Parts No.  |     | Description            | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------|-----|------------------------|------|--------------|--------------------|
| RSH6811    | (G) | Leatherette            | 1    | 17           | 0                  |
| RSH6812    | (G) | Leatherette            | 1    | 17           | 0                  |
| RSH6813    | (G) | Leatherette            | 1    | 17           | 0                  |
| RSH6814    | (G) | Leatherette            | 1    | 17           | 0                  |
| aRSH6815   | (B) | Leatherette            | 1    | 21           | 0                  |
| RSH6816    | (D) | Leatherette            | 1    | 17           | 0                  |
| RSH6817    | (B) | Name plate             | 1    | 21           | 0                  |
| aRSH7112K2 | (C) | Charging lever         | 1    | 19           | 0                  |
| aRSH7115   | (C) | Spring                 | 1    | 19           | 0                  |
| aRSH7116   | (A) | Hub                    | 1    | 19           | 0                  |
| aRSH7119   | (A) | Spring                 | 1    | 18           | 0                  |
| aRSH7121   | (B) | Lever                  | 1    | 18           | 0                  |
| aRSH7122   | (A) | Anchor screw           | 1    | 18           | 0                  |
| aRSH7123   | (B) | Spring                 | 1    | 18           | 0                  |
| aRSH7127   | (B) | Spring                 | 1    | 19           | 0                  |
| aRSH7129   |     | Sponge release lever   | 1    | 19           | 0                  |
| aRSH7131K2 | (A) | Hook                   | 1    | 18           | 0                  |
| aRSH7134   | (A) | Spring                 | 1    | 18           | 0                  |
| aRSH7137   | (B) | Signal                 | 1    | 18           | 0                  |
| aRSH7144K2 | (A) | Pawl                   | 1    | 18           | 0                  |
| aRSH7151   | (A) | Sector gear            | 1    | 18           | 0                  |
| aRSH7153K2 | (B) | Sector gear base       | 1    | 18           | 0                  |
| aRSH7157   | (B) | Shaft                  | 1    | 18           | 0                  |
| aRSH7161K2 | (C) | Preventive lever assy. | 1    | 18           | 0                  |
| aRSH7168   | (B) | Spring                 | 1    | 18           | 0                  |
| aRSH7171   | (A) | Red signal             | 1    | 18           | 0                  |
| RS2615     | (B) | Screw                  | 1    | 18           | 0                  |
| aRSH7173   | (D) | Signal lever           | 1    | 18           | 0                  |
| aRSH7175   | (A) | Spring                 | 1    | 18           | 0                  |
| aRSH7176   | (D) | Anchor screw           | 1    | 18           | 0                  |
| aRSH7177K2 | (C) | Lever                  | 1    | 18           | 0                  |
| aRSH7178   | (B) | Screw                  | 1    | 18           | 0                  |
| aRSH7179   | (A) | Spring                 | 1    | 18           | 0                  |



| Parts No.      | Description                                      | Pcs.  | Ref.<br>Page        | Term<br>of<br>Sale |
|----------------|--|-------|---------------------|--------------------|
| PB1.4x1.3BNi   | Screw for 6118, 6132                             | 6     | 21                  | 0                  |
| 3PB1.4x2BNi    | Screw for 7161K2                                 | 1     | 18                  | 0                  |
| 3PB1.4x3.5BNi  | Screw for 6491, 6493                             | 4     | 18                  | 0                  |
| 3PB1.7x1.6BNi  | Screw for 7131K2                                 | 1     | 18                  | 0                  |
| PB1.7x1.8BNi   | Screw for 7151                                   | 2     | 18                  | 0                  |
| 3PB1.7x2BNi    | Screw for 7144K2                                 | 1     | 18                  | 0                  |
| PB1.7x2.5BNi   | Screw for 6331K2, 6332K2                         | 6     | 20                  | 0                  |
| 3PB1.7x2.5BNi  | Screw for 6411K2                                 | 1     | 19                  | 0                  |
| PB1.7x2.5Cr3   | Screw for 6319K                                  | 4     | 20                  | 0                  |
| PB1.7x3BNi     | Screw for 6421, 6621K2, 6631                     | 7     | 17,19               | 0                  |
| 3PB1.7x3BNi    | Screw for 6327                                   | 2     | 20                  | 0                  |
| PB1.7x4BNi     | Screw for 6621K2, 6631                           | 4     | 17                  | 0                  |
| PD1.7x2BNi     | Screw for 6136                                   | 2     | 21                  | 0                  |
| PD1.7x2.5BNi   | Screw for 6126K2, 6324, 6415, 12<br>6417, 7161K2 | 12    | 17,18,19,<br>20, 21 | 0                  |
| PD1.7x3BNi     | Screw for 6212, 6411K2                           | 4     | 19,21               | 0                  |
| 3PD1.7x3BNi    | Screw for 6411K2                                 | 2     | 19                  | 0                  |
| PD1.7x5.5BNi   | Screw for 6126K2                                 | 2     | 21                  | 0                  |
| PD2x4BNi       | Screw for 6333, 6334, 6335,<br>6336, 6348        | 12    | 20                  | 0                  |
| 6W3x0.05 - 0.1 | Washer for 6441, 6461K2                          | 0 - 3 | 19                  | 0                  |
| 8W4x0.2        | Washer for 6451, 6472K2                          | 0 - 2 | 19,20               | 0                  |
| 5W2.5x0.1      | Washer for 7144K2                                | 0 - 1 | -                   | 0                  |

# Breakdown List for Roll Film Holder Special Assembly (aRSH)

| Parts No.         |     | Description       | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-------------------|-----|-------------------|------|--------------|--------------------|
| <u>aRSH6111K2</u> | (C) | Film holder frame | 1    | 21           | *                  |
| -aRSH6111         | (C) | Frame, upper      | 1    | -            | x                  |
| -aRSH6112         | (A) | Frame, lower      | 1    | -            | x                  |
| -RSH6113K         | (C) | Spring            | 1    | -            | *                  |
| -PD1.4x4BN1       |     | Screw             | 11   | 21           | *                  |
| -aRSH6717         | (B) | Lock lever        | 1    | 21           | *                  |
| -aRSH6718         | (B) | Screw             | 1    | 21           | *                  |
| -aRSH6719         | (A) | Spring            | 1    | 21           | *                  |
| <u>aRSH6121K2</u> | (A) | Latch             | 1    | 21           | 0                  |
| -aRSH6121         | (A) | Latch             | 1    | -            | x                  |
| -RSH6122          | (D) | Boss              | 2    | -            | x                  |
| <u>RSH6126K2</u>  | (D) | Latch cover       | 1    | 21           | 0                  |
| -RSH6126          | (D) | Cover plate       | 1    | -            | x                  |
| -RSH6125          | (A) | Stud              | 2    | -            | x                  |
| <u>aRSH6211K2</u> | (A) | Back lid          | 1    | 21           | *                  |
| -aRSH6211         | (A) | Back lid          | 1    | -            | x                  |
| -aRSH6141         | (B) | Collar            | 2    | -            | x                  |
| -aRSH6142         | (B) | Rivet             | 2    | -            | x                  |
| -RSH6216          | (B) | Spring            | 2    | -            | x                  |
| -RSH6217          | (B) | Guide pin         | 2    | -            | x                  |
| -Rm1.5            |     | Rivet             | 10   | -            | x                  |
| -RSH6221          | (A) | Memo holder       | 1    | -            | x                  |
| -RSH6222          | (B) | Spring            | 1    | -            | x                  |
| -RSH6223          | (A) | Plate             | 1    | -            | x                  |
| -RSH6225          | (B) | Flange plate      | 1    | -            | x                  |
| <u>aRSH6311K2</u> | (C) | Plate holder      | 1    | 20           | 0                  |
| -aRSH6311         | (C) | Plate             | 1    | -            | x                  |
| -RSH6313          | (B) | Spring            | 1    | -            | x                  |
| -Rm1.5            |     | Rivet             | 2    | -            | x                  |

| Parts No.         |     | Description       | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-------------------|-----|-------------------|------|--------------|--------------------|
| <u>aRSH6315K2</u> | (A) | Pressure plate    | 1    | 20           | 0                  |
| -aRSH6315         | (A) | Plate             | 1    | -            | x                  |
| -RSH6316          | (E) | Guide pin         | 1    | -            | x                  |
| <u>aRSH6331K2</u> | (E) | Base plate, upper | 1    | 20           | *                  |
| -aRSH6331         | (E) | Base plate        | 1    | -            | x                  |
| -aRSH6412-1       | (A) | Pole              | 2    | -            | x                  |
| -aRSH6412-2       | (A) | Pole              | 1    | -            | x                  |
| -aRSH6437         | (A) | Pole              | 1    | -            | x                  |
| -RSH6439          | (A) | Hub               | 1    | -            | x                  |
| -aRSH6454         | (A) | Pole              | 1    | -            | x                  |
| -aRSH6457         | (B) | Anchor            | 2    | -            | x                  |
| -aRSH6461K        | (D) | Release lever     | 1    | -            | x                  |
| -aRSH6461         | (D) | Lever             | 1    | -            | x                  |
| -aRSH6462-1       | (A) | Anchor            | 1    | -            | x                  |
| -aRSH6469         | (G) | Pin               | 1    | -            | x                  |
| -aRSH6462-2       | (A) | Anchor            | 1    | -            | x                  |
| -aRSH6475K2       | (E) | Lever             | 1    | -            | x                  |
| -aRSH6475         | (E) | Lever             | 1    | -            | x                  |
| -aRSH6478         | (B) | Shaft             | 1    | -            | x                  |
| -aRSH6497         | (A) | Anchor            | 1    | -            | x                  |
| -aRSH6482         | (C) | Shaft             | 1    | -            | x                  |
| -aRSH6489-1       | (D) | Bush              | 1    | -            | x                  |
| -aRSH6642         | (B) | Boss              | 1    | -            | x                  |
| -aRSH7139         | (A) | Pin               | 1    | -            | x                  |
| -aRSH7141         | (A) | Pole              | 1    | -            | x                  |
| -aRSH7142         | (C) | Pole              | 1    | -            | x                  |
| -aRSH7149         | (B) | Pin               | 1    | -            | x                  |
| <u>aRSH6341K2</u> | (C) | Roller            | 1    | 20           | 0                  |
| -aRSH6341         | (C) | Roller            | 1    | -            | x                  |
| -aRSH6342         | (D) | Plug              | 2    | -            | x                  |
| <u>aRSH6347K2</u> | (B) | Roller            | 1    | 20           | 0                  |
| -aRSH6347         | (B) | Roller            | 1    | -            | x                  |
| -aRSH6342         | (D) | Plug              | 2    | -            | x                  |

| Parts No.         |     | Description         | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-------------------|-----|---------------------|------|--------------|--------------------|
| <u>aRSH6411K2</u> | (C) | Base plate          | 1    | 19           | 0                  |
| -aRSH6411         | (C) | Base plate          | 1    | -            | x                  |
| -aRSH7125         | (A) | Lever               | 1    | -            | x                  |
| -aRSH7126         | (A) | Pin                 | 1    | -            | x                  |
| -aRSH7128         | (B) | Anchor              | 1    | -            | x                  |
| -aRSH7162         | (B) | Pin                 | 1    | -            | x                  |
| -aRSH7174         | (B) | Pin                 | 1    | -            | x                  |
| <u>RSH6419K2</u>  | (D) | Disk                | 1    | 17           | 0                  |
| -RSH6419          | (D) | Disk                | 1    | -            | x                  |
| -RSH6421-1        | (B) | Pin                 | 2    | -            | x                  |
| -RSH6421-2        | (A) | Pin                 | 1    | -            | x                  |
| <u>aRSH6424K2</u> | (A) | Winding gear, No. 1 | 1    | 19           | 0                  |
| -aRSH6424         | (A) | Gear                | 1    | -            | x                  |
| -aRSH7111         | (B) | Pin                 | 2    | -            | x                  |
| <u>aRSH6431K2</u> | (C) | Winding stop gear   | 1    | 19           | 0                  |
| -aRSH6431         | (C) | Gear                | 1    | -            | x                  |
| -RSH6432          | (A) | Gear                | 1    | -            | x                  |
| -RSH6433          | (A) | Pin                 | 2    | -            | x                  |
| -RSH6434          | (A) | Pin                 | 2    | -            | x                  |
| <u>aRSH6435K2</u> | (D) | Pawl                | 2    | 19           | 0                  |
| -RHL1428          |     | Pawl                | 2    | -            | x                  |
| -aRSH6436         | (D) | Spring              | 2    | -            | x                  |
| <u>aRSH6451K2</u> | (C) | Release lever       | 1    | 19           | 0                  |
| -aRSH6451         | (C) | Stop lever          | 1    | -            | x                  |
| -aRSH6452         | (C) | Hub                 | 1    | -            | x                  |
| -aRSH6455         | (C) | Pawl                | 1    | -            | x                  |
| -Rml.5cr          |     | Rivet               | 2    | -            | x                  |
| -aRSH6465         | (C) | Release lever       | 1    | -            | x                  |
| <u>aRSH6461K2</u> | (D) | Release plate       | 1    | 19           | 0                  |
| -aRSH6461         | (D) | Plate               | 1    | -            | x                  |
| -aRSH6462-1       | (A) | Pole                | 1    | -            | x                  |
| -aRSH6469         | (C) | Pin                 | 1    | -            | x                  |

| Parts No.         |     | Description             | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|-------------------|-----|-------------------------|------|--------------|--------------------|
| <u>aRSH6472K2</u> | (B) | Second gear             | 1    | 20           | 0                  |
| -aRSH6472         | (B) | Gear                    | 1    | -            | x                  |
| -aRSH6474         | (C) | Hub                     | 1    | -            | x                  |
| <u>aRSH6476K2</u> | (A) | Third gear              | 1    | 20           | 0                  |
| -RHL1457          |     | Gear wheel              | 1    | -            | x                  |
| -aRSH6477         | (A) | Gear                    | 1    | -            | x                  |
| <u>aRSH6484K2</u> | (C) | Counter dividing device | 1    | 18           | 0                  |
| -aRSH6484         | (C) | Plate                   | 1    | -            | x                  |
| -aRSH6486         | (C) | Boss                    | 1    | -            | x                  |
| <u>aRSH6485K2</u> | (C) | Auxiliary dividing disc | 1    | 18           | 0                  |
| -aRSH6485         | (C) | Plate                   | 1    | -            | x                  |
| -aRSH6487         | (A) | Boss                    | 1    | -            | x                  |
| <u>aRSH6611K2</u> | (A) | Film spool holder       | 1    | 17           | 0                  |
| -aRSH6611         | (A) | Plate                   | 1    | -            | x                  |
| -aRSH6613         | (A) | Pole                    | 1    | -            | x                  |
| -aRSH6614         | (A) | Pole                    | 2    | -            | x                  |
| <u>aRSH6621K2</u> | (C) | Top cover               | 1    | 17           | 0                  |
| -aRSH6621         | (C) | Top cover               | 1    | -            | x                  |
| -aRSH7182         | (A) | Lever                   | 1    | -            | x                  |
| -aRSH7183         | (B) | Plate                   | 1    | -            | x                  |
| -aRSH7184         | (D) | Guide ring              | 1    | -            | x                  |
| -aRSH7185         | (C) | Click                   | 1    | -            | x                  |
| <u>aRSH7112K2</u> | (C) | Charging lever          | 1    | 19           | 0                  |
| -aRSH7112         | (C) | Lever                   | 1    | -            | x                  |
| -aRSH7113         | (C) | Lever                   | 1    | -            | x                  |
| -aRSH7114         | (B) | Boss                    | 1    | -            | x                  |
| -aRSH7117         | (B) | Connection arm          | 1    | -            | x                  |
| -aRSH7118         | (B) | Boss                    | 1    | -            | x                  |
| <u>aRSH7131K2</u> | (A) | Hook                    | 1    | 18           | 0                  |
| -aRSH7131         | (A) | Hook                    | 1    | -            | x                  |
| -aRSH7132         | (A) | Hub                     | 1    | -            | x                  |

| Parts No.           |      | Description            | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|---------------------|------|------------------------|------|--------------|--------------------|
| <u>aRSH7144K2</u>   | (A)  | Pawl                   | 1    | 18           | 0                  |
| - aRSH7144          | (A)  | Pawl                   | 1    | -            | x                  |
| - aRSH7145          | (C)  | Gear                   | 1    | -            | x                  |
| <u>aRSH7153K2</u>   | (B)  | Sector gear base       | 1    | 18           | 0                  |
| - aRSH7153          | (B)q | Plate                  | 1    | -            | x                  |
| - aRSH7154          | (B)  | Hub                    | 1    | -            | x                  |
| - aRSH7155          | (A)  | Pin                    | 1    | -            | x                  |
| <u>aRSH7161K2</u>   | (C)  | Preventive lever assy. | 1    | 18           | 0                  |
| - aRSH7161          | (C)  | Lever                  | 1    | -            | x                  |
| - aRSH7166          | (C)  | Lever                  | 1    | -            | x                  |
| - aRSH7167          | (D)  | Rivet                  | 1    | -            | x                  |
| - aRSH7169          | (A)  | Anchor                 | 1    | -            | x                  |
| - <u>aRSH7138K2</u> | (D)  | Hook base              | 1    | -            | x                  |
| - aRSH7138          | (D)  | Base                   | 1    | -            | x                  |
| - aRSH7133          | (B)  | Hub                    | 1    | -            | x                  |
| - aRSH7146          | (A)  | Hub                    | 1    | -            | x                  |
| - aRSH7156          | (A)  | Boss                   | 1    | -            | x                  |
| - aRSH7165          | (B)  | Rivet                  | 1    | -            | x                  |
| <u>aRSH7177K2</u>   | (C)  | Lever                  | 1    | 18           | 0                  |
| - aRSH7177          | (C)  | Lever                  | 1    | -            | x                  |
| - aRSH7181          | (B)  | Pin                    | 1    | -            | x                  |

Exclusive use for 220 Roll Film Holder (BRSH)

| Parts No.  | Description             | Pcs. | Ref.<br>Page | Term<br>of<br>Sale |
|------------|-------------------------|------|--------------|--------------------|
| BRSH6311K2 | Plate holder            | 1    | 20           | o                  |
| BRSH6327   | T-spring base           | 1    | 20           | o                  |
| BRSH6328   | Name plate              | 1    | 20           | o                  |
| BRSH6331K2 | Base plate,upper        | 1    | 20           | *                  |
| BRSH6332   | Base plate,lower        | 1    | 20           | o                  |
| BRSH6333   | Film guide              | 1    | 20           | o                  |
| BRSH6334   | Film guide              | 1    | 20           | o                  |
| BRSH6341K2 | Roller                  | 1    | 20           | o                  |
| BRSH6344K  | Counter reller          | 1    | 20           | o                  |
| BRSH6345   | Coller                  | 1    | 20           | o                  |
| BRSH6471   | First gear              | 1    | 20           | o                  |
| BRSH6472K2 | Second gear             | 1    | 20           | o                  |
| BRSH6611K2 | Film spool holder       | 1    | 17           | o                  |
| BRSH6615   | Leaf spring             | 1    | 17           | o                  |
| BRSH6915K2 | Pressure plate          | 1    | 20           | o                  |
| BRSH6973   | Second small gear       | 1    | 20           | o                  |
| BRSH6976K2 | Third gear              | 1    | 20           | o                  |
| BRSH6984K2 | Counter dividing device | 1    | 18           | o                  |
| BRSH6985K2 | Auxiliary dividing disc | 1    | 18           | o                  |
| BRSH6991   | Film counter gear       | 1    | 18           | o                  |
| BRSH6993   | Expasure counter plate  | 1    | 18           | o                  |
| BRSH6937   | Discrimination plate    | 1    | 17           | o                  |
| PCP569     | Washer                  | 2    | 19           | o                  |